



CLEARPOWER
BATTERY BACKUP
USER'S GUIDE



Welcome

Contact Information

Please contact us with any questions that you might have. We are happy to assist you!


ClearSounds Communications, Inc.
1743 Quincy Avenue, Suite 155
Naperville, IL 60540 USA

800-965-9043 (toll-free)

Information Online

To view & print additional copies of this manual, quick-start guide or spec sheet or to view instructional videos, please visit the Support Section on our website.

www.clearsounds.com

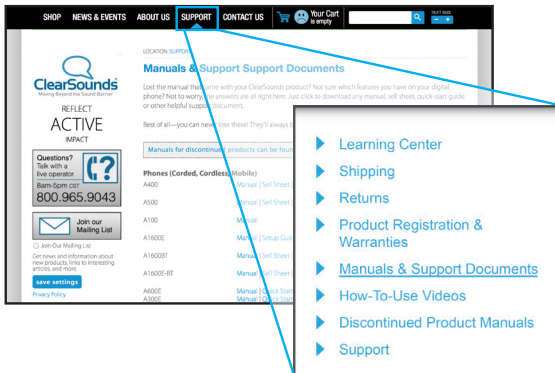

Safety Precautions

The following precautions are the kind of boring, but important information you should read to ensure maximum performance and safety when using the ClearPower Battery Backup.

Warnings



Warnings must be observed to prevent bodily injury.

WARNING: Use the equipment only in the described manner to avoid bodily injury or damage to the equipment.

WARNING: Locate and use the ClearPower Battery Backup away from water and damp areas, such as swimming pools, bathtubs, sinks and damp basements, and do not use the ClearPower Battery Backup when you are wet, to avoid electrical shock.

WARNING: Do not overload extension cords or power strips. This can result in electric shock.

WARNING: Avoid using the ClearPower Battery Backup during an electrical storm. There is a slight risk of electrical shock from lightning during a storm.

Contents

Unpack

Ensure that your packing box includes all of these parts. If any parts are missing or damaged, please contact your vendor or ClearSounds customer support.

IMPORTANT: YOUR RECEIPT IS REQUIRED FOR WARRANTY. PLEASE RETAIN YOUR RECEIPT.



CLEARPOWER
Battery Backup




Output Cable




AC adapter

Getting Familiar

Battery Life Indicator Panel

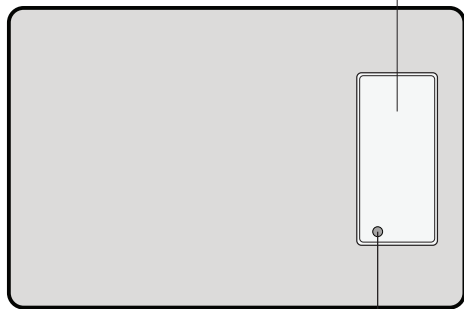

Battery Power Indicator Button

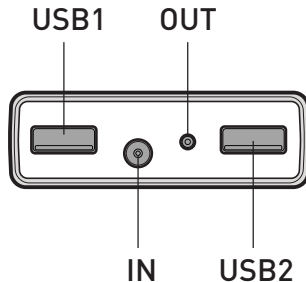


USB1- for mobile phones
USB2- for tablets

Operation

Step 1: Charge

- A. Before using your ClearPower Battery Backup System, connect the power adapter to the input jack.
- B. Plug the power adapter in the wall.
- C. Charge your ClearPower for at least 12 hours.

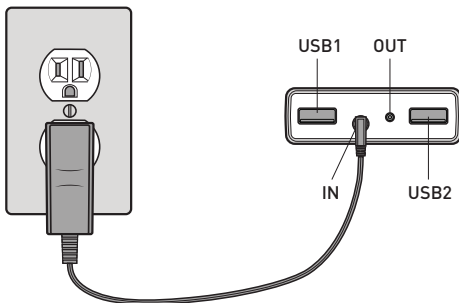


Operation

Step 2: Connect To Your Devices

Option 1 – Back-up power for your corded electronics

- A. Connect the small plug of the output cable to the OUT jack on the ClearPower Battery Backup. Connect the large plug of the output cable to the power adapter jack on the phone or device.
- B. Plug the ClearPower AC power adapter into the IN jack on the ClearPower unit and then into the wall outlet.

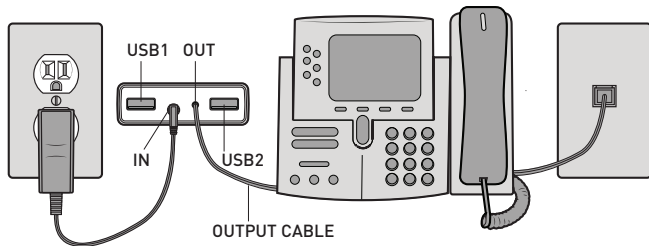

Operation

You're all set! In the event of a power outage, the ClearPower Battery Back-up System will continue to power whatever device it is plugged into for up to 4 days of regular use. You can check the status of the ClearPower battery by simply pressing and holding the Battery Indicator Button on the top of the unit.

There are (5) LED indicator lights that identify the power level of the ClearPower unit. When all (5) indicator lights appear, the unit is fully charged. When the unit is down to only (1) indicator light, there is only 20% battery life remaining. It is important to recharge the ClearPower at this point.

Option 2 – Portable Battery Charger for Mobile Devices

IMPORTANT: At the risk of stating the obvious, make sure your ClearPower is fully charged before taking it with you as a portable charger for your mobile devices, using that handy-dandy Battery Indicator Button to check the power level. Press and hold the small button on the Battery Use Indicator Panel (see page 6). If all five (5) indicator lights appear, you are good to go. Your ClearPower is fully charged.

Operation

If only 2-3 indicator lights appear, you may want to charge it up before heading out or make sure to bring the power adapter with you in the event you need to recharge.

The ClearPower has (2) USB output jacks which accommodate any 5V mobile device charger. (See illustration on page12.)

- a.) The jack labeled USB1 is a 1 amp current. Ok, for those of you who are not engineer types, that simply means it is suitable for any mobile phone (iPhone, Android, 1990's flip phone – Hey, there are still some out there.)
- b.) The jack labeled USB2 is a 2 amp current. This jack is suitable for an iPad or Android tablet device.

Operation

To charge your mobile phone, simply plug the charging cable that came with your phone into your phone, and then plug the USB plug into the USB1 jack on the ClearPower device.

NOTE: Most mobile phones come with a USB power adapter that can be removed from the AC plug and used to charge with any USB output jack on a computer, laptop, etc. This is the cord you would use to plug into your ClearPower.

To charge your tablet, simply plug the USB charging cord into the USB2 jack.

Operation

EXCITING BONUS: If both your mobile phone and your tablet need to be charged on the go at the same time, you can charge both simultaneously.


Average charging times when the mobile device is at 0% battery life (aka “dead”):

Mobile Phone: 3 hours

Tablet: 4 hours

PLEASE NOTE:

The ClearPower Battery Back-up System works on electronic devices with power voltage between 6V-9V DC.

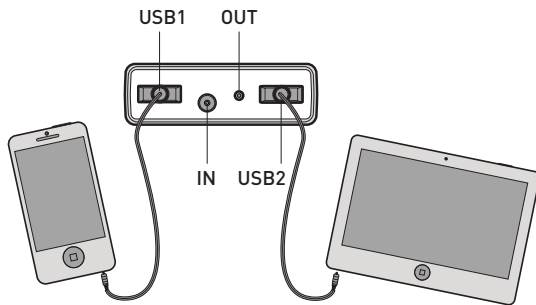

Plugging in the ClearPower Battery Back-up System to your smartphone and your tablet.

Warranty

Your ClearPower Battery Backup comes with a (1) year limited warranty from the date of purchase. This product is warranted by ClearSounds against manufacturing defect in material and workmanship under normal use. In the event that this product fails to function properly due to defects in materials or workmanship within one year of the original purchase, return the unit with proof of purchase (sales receipt or packing slip, no exceptions) to ClearSounds Communications.

ClearSounds Communications will either repair or replace the unit (with a refurbished unit or unit of equal condition) and return it you (using UPS/USPS ground shipping) at no cost to you. The warranty replacement or repair will be warranted for a period of 90 days or the remainder of the original warranty period (from original purchase date), whichever is longer.

The warranty does not cover accidents, negligence or breakage to any parts. This includes shipping damage, failure to follow instructions, misuse, fire, floods, use of incompatible accessories, acts of God or failure in your phone service carrier's line service. The product must not be tampered with or taken apart by anyone who is not an authorized ClearSounds Communications® representative. Tampering with the phone will void any written or implied warranties.

Warranty

If a defect covered by this warranty should occur, promptly contact a Customer Service representative by phone, or log on to www.clearsounds.com to obtain a Return Merchandise Authorization (RMA) number and shipping instructions before shipping the product to us. Any shipment without an RMA number will not be accepted and will be returned to you at your expense. All authorized returned products must be accompanied with proof of purchase and a brief explanation of the problem.

For out-of-warranty repairs and service, please contact our Customer Service department for instructions. Any repair shall be warranted for 90 days.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR WARRANTY AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

