



IP Setup Document

Step 1: Get the answers to the following questions from the customer. These answers are required to proceed to Step 2, with no exceptions.

A.) Are you the homeowner or the installer?
(If they say both we do not provide free support, they must be an actual installer/dealer installing this for a customer)

B.) Router Brand:
Router Part Number:
Router Username:
Router Password:

C.) Modem Brand:
Modem Part Number:
Modem Username:
Modem Password:

D.) WAN IP: (Have customer go to www.ipchicken.com for this number)

E.) DVR Username (if default, it is admin)
DVR Password (if default, it is 123456)

F.) Ask the customer if they have a Static or Dynamic IP address

Step 2: Verify the customer has the right equipment to set up the IP Camera

A.) Verify the customer has a CAT5 cable plugged into the IP Camera from the router or switch

CHANNEL VISION
Costa Mesa CA 92626
1-800-840-0288
www.channelvision.com

Title
IP Setup Document

Scale na	Sheet	Date 08/11
-------------	-------	---------------




IP Setup Document

Step 2: Describe the following steps to the customer:

A.) Click the 'Run' icon on your computer.



B.) Type in 'cmd' and press enter on your keyboard, or press ok.

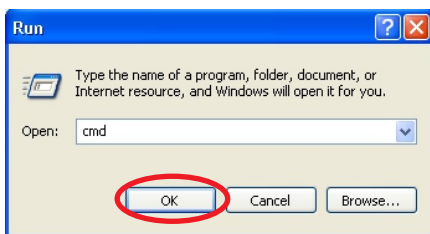

C.) Type in 'ipconfig /all' into the Dos prompt that appears. Press enter.

D.) Write down your computer's IP address.

For example, this computer's IP address is 192.168.1.74.

This is for reference only. Do not put this IP address into the IP Camera.

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\jjesson>ipconfig /all

Windows IP Configuration

Host Name . . . . . : jjesson
Primary Dns Suffix . . . . . : internal.channelvision.com
Node Type . . . . . : Hybrid
IP Routing Enabled. . . . . : No
WINS Proxy Enabled. . . . . : No
DNS Suffix Search List. . . . . : internal.channelvision.com
                                internal.channelvision.com
                                channelvision.com

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  : internal.channelvision.com
    Description . . . . . : Broadcom NetXtreme 57xx Gigabit Controller
    Physical Address. . . . . : 
    Dhcp Enabled. . . . . : Yes
    Autoconfiguration Enabled . . . . : Yes
    IP Address. . . . . : 192.168.1.74
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 192.168.1.1
    DHCP Server . . . . . : 192.168.1.9
    DNS Servers . . . . . : 192.168.1.9
                          192.168.1.5
    Primary WINS Server . . . . . : 192.168.1.9
    Lease Obtained. . . . . : Tuesday, September 07, 2010 9:32:05 AM
    Lease Expires . . . . . : Wednesday, September 15, 2010 9:32:05 AM
```



IP Setup Document

D.) Copy/write down the following information from the Dos prompt:

- 1.) Default Gateway (Example 192.168.1.1)
- 2.) DNS Server (if 2 servers, use the first one, for example 192.168.1.9)
- 3.) Subnet Mask (Example 255.255.255.0)

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\jjesson>ipconfig /all

Windows IP Configuration

Host Name . . . . . : jjesson
Primary Dns Suffix . . . . . : internal.channelvision.com
Node Type . . . . . : Hybrid
IP Routing Enabled. . . . . : No
WINS Proxy Enabled. . . . . : No
DNS Suffix Search List. . . . . : internal.channelvision.com
                                  internal.channelvision.com
                                  channelvision.com

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : internal.channelvision.com
    Description . . . . . : Broadcom NetXtreme 57xx Gigabit Controller
    Physical Address. . . . . : 
    Dhcp Enabled . . . . . : Yes
    Autoconfiguration Enabled . . . . : Yes
    IP Address. . . . . : 192.168.1.74
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 192.168.1.1
    DHCP Server . . . . . : 192.168.1.9
    DNS Servers . . . . . : 192.168.1.9
                          192.168.1.5
    Primary WINS Server . . . . . : 192.168.1.9
    Lease Obtained. . . . . : Tuesday, September 07, 2010 9:32:05 AM
    Lease Expires . . . . . : Wednesday, September 15, 2010 9:32:05 AM
```

CHANNEL VISION
Costa Mesa CA 92626
1-800-840-0288
www.channelvision.com

Title IP Setup Document		
Scale na	Sheet	Date 08/11



IP Setup Document

Step 3:

- 1.) Connect the IP camera to the switch/router.
- 2.) Power on the IP camera.
- 3.) Open "IP Installer" (Comes on the disk that came with the camera)
- 4.) Press "Search"
- 5.) Click on the "Server name" that is found in IP Installer.

Device lists:

Server Name	IP Address
DVR-16	192.168.001.196
DVR-04H	192.168.001.220
DVR-08	192.168.001.246
6522	192.168.001.208
6521	192.168.001.205
W-1001	192.168.001.207
DVR-8 (With HDD)	192.168.001.231

☒ Static ☐ DHCP

Name: 6522

IP: 192 168 1 208

Netmask: 255 255 255 0

Gateway: 192 168 1 1

DNS 1: 192 168 1 9

DNS 2: 192 168 1 5

Port1: 8006

MAC: 00:0F:0D:21:7B:35

Search Device

Submit

Exit

To Change Device Name, IP address, and Gateway:

1. Select the device on the left side.
2. Change network parameter on the right side.
3. Press Submit button.
4. Press ISearch DeviceI to re-search again.
5. Double click the device to open it.



IP Setup Document

10.) Make sure “Static” is selected at top.

11.) Assign an IP address to the IP Camera by using the first 3 sets of numbers of your default gateway.

Use exactly the same 3 sets of numbers as your default gateway that you wrote down.

For Example: If the default gateway is 192.168.1.1

Then the IP Camera’s IP Address will start with 192.168.1._

Note: Last set of numbers are called the host number, not entered yet.

For the host number, be sure to assign a different number than your computer’s host number

(2-250) Complete the IP Camera’s IP address by entering a host number (last digits).

Complete the IP Camera’s IP address by entering a host number (last digits).

12.) Enter the information you wrote down from Step 2 on page 3.

A.) Subnet Mask

B.) (Default) Gateway

C.) DNS (Server)

D.) Port (Channel Vision recommends 8000)

13.) After entering the information, click “Submit”

14.) Open <http://192.168.1.208:8000> in Internet Explorer
[http://\(Your IP Camera's IP\):\(port you assigned\)](http://(Your IP Camera's IP):(port you assigned))

IP Installer V2.2

Device lists:

Server Name	IP Address
DVR-16	192.168.001.196
DVR-04H	192.168.001.220
DVR-08	192.168.001.246
6522	192.168.001.208
6521	192.168.001.205
W-1001	192.168.001.207
DVR-8 (With HDD)	192.168.001.231

Search Device

To Change Device Name, IP address, and Gateway:
1. Select the device on the left side.
2. Change network parameter on the right side.
3. Press Submit button.
4. Press ISearch Device to re-search again.
5. Double click the device to open it.

Static ☒ DHCP ☐

Name: 6522

IP: 192 168 1 208

Netmask: 255 255 255 0

Gateway: 192 168 1 1

DNS 1: 192 168 1 9

DNS 2: 192 168 1 5

Port1: 8006

MAC: 00:0F:0D:21:7B:35

Submit

Exit

CHANNEL VISION
Costa Mesa CA 92626
1-800-840-0288
www.channelvision.com



Title
IP Setup Document

Scale na Sheet Date 08/11



IP Setup Document

- 21.) The first time you connect to the DVR through Internet Explorer, it will ask you to install the ActiveX control on your computer. Internet Explorer 6,7,8, or 9 must be used with this ActiveX control. However, IE 6 is very old, and will not always work. If the ActiveX control does not load, please go to “Tools” “Internet Options”, then “Security” then “Custom Level” Every area that mentions ActiveX should be “Prompt” unless it is already set to enable or disable.

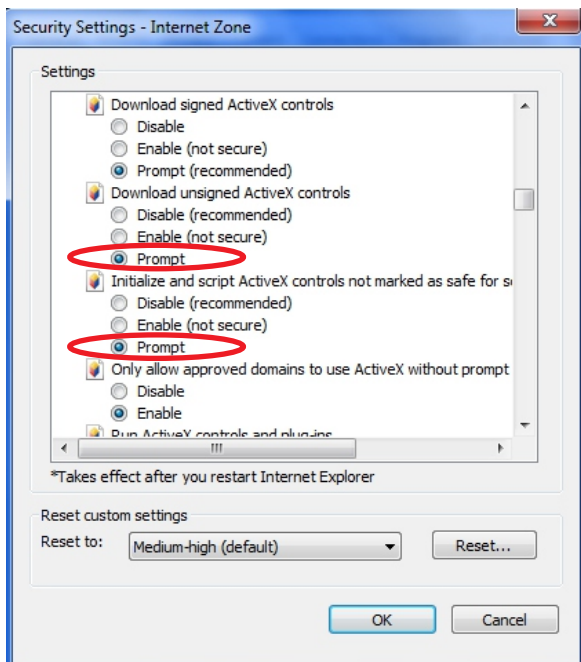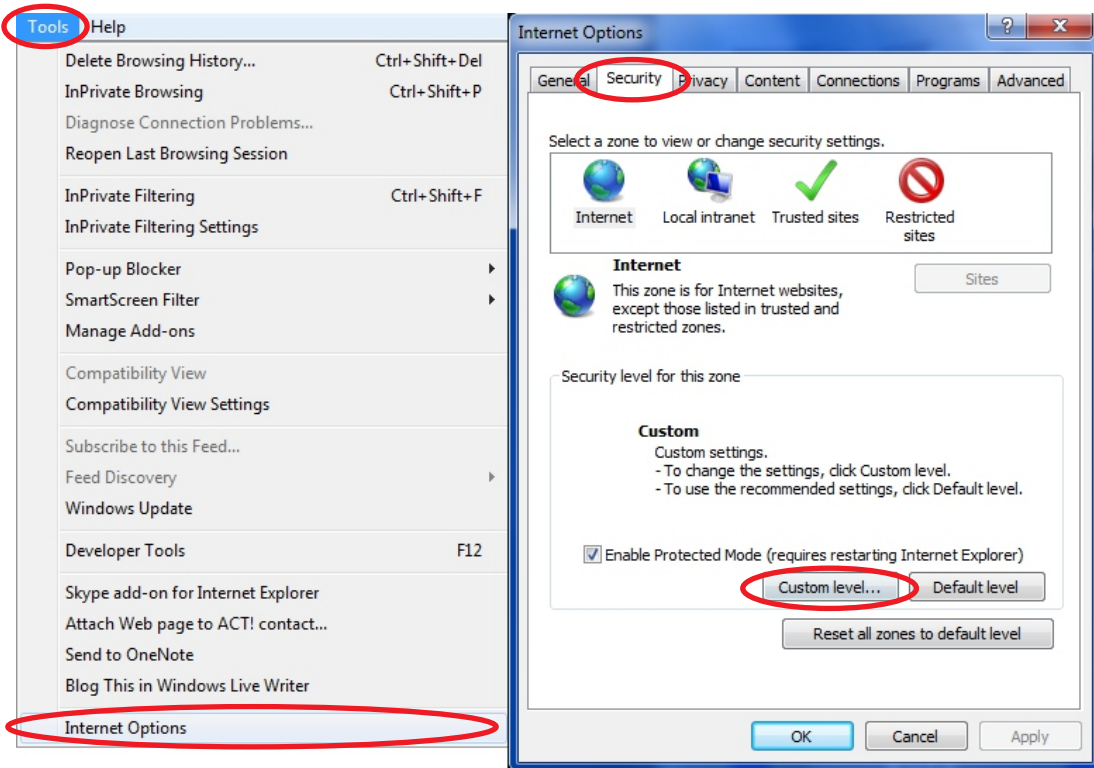

CHANNEL VISION
Costa Mesa CA 92626
1-800-840-0288
www.channelvision.com


Title IP Setup Document		
Scale na	Sheet	Date 08/11




DDNS Setup

Step 4: Go to the following web address: www.dyndns.com.

1.) Scroll down, and click the “Free Dynamic DNS” option.

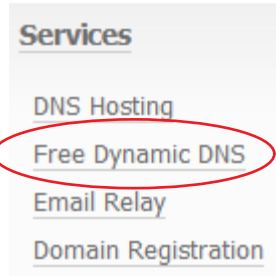

2.) Click the “Get Started” Icon.

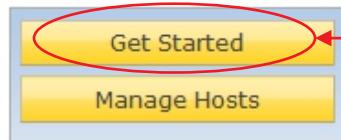

IMPORTANT NOTE: YOU WILL NEED TO CREATE A FREE ACCOUNT WITH DYNDNS.ORG

CHANNEL VISION
Costa Mesa CA 92626
1-800-840-0288
www.channelvision.com

Title
IP Setup Document

Scale
na

Sheet

Date
08/11



DDNS Setup

3.) Under “Hostname” chose a name for the DVR. Make sure to chose the dyndns.org option

4.) “For Service Type” select “Host With IP Address”.

The screenshot shows the DDNS Setup form with the following fields and annotations:

- Hostname:** A text box containing "customerdvname" followed by a dropdown menu set to "dyndns.org".
- Wildcard Status:** A label "Disabled" followed by a link "[Want Wildcard support?]" in blue.
- Service Type:** Three radio button options: "Host with IP address" (selected with a green dot), "WebHop Redirect", and "Offline Hostname". Each option has a small "[?]" icon.
- IP Address:** A text box is empty, and below it is a blue link "Use auto detected IP address 88.888.32.212." circled in red. A red arrow points from this link down to step 5.
- Mail Routing:** A checkbox labeled "Yes, let me configure Email routing." followed by a "[?]" icon.
- Add To Cart:** A blue button with white text, circled in red. A red arrow points from this button down to step 6.

5.) Click “Use auto detected IP Address”
(Same number can be found at www.ipchicken.com)

6.) Click “Add To Cart”



DDNS Setup

7.) Click Next.

Shopping Cart

Your cart contains **free services only**. You will not be asked for credit card information.

Dynamic DNS Hosts

customerdvname.dyndns.org

-

remove

\$0.00

Please enter coupons in the box below and click "Add Coupon".

Add Coupon

Sub-Total:

\$0.00

Order Total:

\$0.00

Next >>

8.) Click "Activate Services"

Free Services Checkout

Once you have confirmed the contents of your cart your services will be instantly activated.

Service	Period	Price
Dynamic DNS Hosts		
customerdvname.dyndns.org	-	\$0.00
Sub-Total:		\$0.00

Activate Services >>

9.) Copy "customerdvname.dyndns.org"

Please note: Your DVR web address WILL be different than "customer name".

You must choose your own name for the DVR.

CHANNEL VISION
Costa Mesa CA 92626
1-800-840-0288
www.channelvision.com

Title
IP Setup Document

Scale
na

Sheet

Date
08/11



DDNS Setup

10.) Now, add the DDNS information into the DVR. When on the network page of the DVR, click or select the “DDNS” button.

DDNS SETUP

☒ Enable DDNS

DDNS Server: dyndns.org

Host Name: customername.dyndns.org

User Name: channelvision

Password: ●●●●●●●●●●●●●●●●

[MENU] OK; [ESC] Cancel

OK Cancel



Port Forwarding

Many routers have the ability to port forward your DVR, allowing access to the DVR from anywhere in the world. Below are some basic examples of port forwarding. The **example** below is of a SMC router. This must be completed to view on any device outside of your home or office network.

Forward your router to forward a port (such as port 5400) to the internal IP address of the DVR.

Using the SMC router interface, click Advanced Setup.

Click NAT and the Virtual Server page should appear as shown below.
(Other routers should have a similar interface)

Port Forwarding SMC Router

Enter the address of the DVR		Designate a port (should be the same port you set on the DVR)		Check box to enable forwarding	
ID	IP Address	Port/s	Data Type	Enable	
1	192.168.2.206	5400	TCP	☒	
2	192.168.2.		TCP	☐	
3	192.168.2.		TCP	☐	

Choose TCP from the drop down box
(Transmission Control Protocol)

Note: the address shown above is just an example.

To activate the changes, scroll to the bottom of the page and click “Apply” and then “Restart”.

1. Click
RESTART

2. Click
APPLY



CHANNEL VISION
Costa Mesa CA 92626
1-800-840-0288
www.channelvision.com

Title
IP Setup Document

Scale
na

Sheet

Date
08/11



Port Forwarding

Below are several points of reference regarding port forwarding.

1.) [Http://en.wikipedia.org/wiki/Port_forward](http://en.wikipedia.org/wiki/Port_forward)

The wikipedia page explains what port forwarding is, how it is used and what its applications are.

***This website is not affiliated with Channel Vision.**

2.) [Http://screenshots.portforward.com/](http://screenshots.portforward.com/)

This website contains picture by picture walkthroughs on how to port forward most routers on the market.

***This website is not affiliated with Channel Vision.**

Port Forwarding LG Routers

In the example below, there is a DVR running on port 8002 on the LAN.

1.) Add the IP information, including the desired port into the port forwarding tab of "advanced" in the router

2.) Check "Enable Port Forwarding".

☒ **Enable Port Forwarding**

Description :	DVR
Local IP :	192.168.2.64
Protocol :	Both ▾
Local Port :	8002
Public Port :	8002

Add

Reset

3.) Click 'Add'.

4.) Click "Select".

Current Port Forwarding Table :

NO.	Description	Local IP	Local Port	Type	Public Port	Select
1	DVR	192.168.2.64	8002	BOTH	8002	☐

Delete Selected

Delete All

Reset

Apply

Cancel

5.) Select "Apply" to enable your new port forwarding rule

CHANNEL VISION
Costa Mesa CA 92626
1-800-840-0288
www.channelvision.com

Title
IP Setup Document

Scale
na

Sheet

Date
08/11



Common Issues

Over the course of setting up hundreds of DVR's, we have found some routers to be problem routers. Some are companies, some are just general things to look out for. Below are a list of things to note.

- 1.) **2Wire** modem/router combinations do not work the normal way with this DVR. You cannot set up the DVR on "LAN" and must select "DHCP" in the DVR's network menu. Once you do this, there is a good chance that the DVR will show up in the **2Wire** router, allowing you to port forward the DVR. If you give the DVR a LAN address, the **2Wire** router will not detect it, and you cannot port forward it.
- 2.) Port forwarding does not work in all routers. Sometimes, a router flat out doesn't have the ability to do port forwarding. This is very rare. However, they do exist.
- 3.) Port forwarding may not work in a router because it is defective. It is always possible, though very rare, that the router the customer has is defective when it comes to port forwarding
- 4.) Lets say you already port forwarded the router, and DVR should be working outside of the network. Inside of the network, the DVR works, however, the DVR does not work externally. There are many reasons this could happen, but here are the 2 most common causes of something like that:
 - A.) The DVR network page is not set up properly. For example, maybe they are missing the DNS server, or the subnet mask is wrong. It will still connect internally usually, but not externally.
 - B.) The customer unknowingly has 2 routers. No matter what you do, you cannot have 2 routers in a network if you wish to view the DVR outside of the network. The only exception to this is if one router is completely disabled, being used only as a wireless access point

CHANNEL VISION
Costa Mesa CA 92626
1-800-840-0288
www.channelvision.com

Title
IP Setup Document

Scale na	Sheet	Date 08/11
-------------	-------	---------------