

Quick User Guide

10013367 A

THIS PAGE INTENTIONALLY LEFT BLANK

CONTENTS

Summary of Keypad Main User Commands	4
Introduction	5
Keypad Indication	5
LCD Status Display	5
LCD Blank Display	6
Editing User Codes	6
Assigning Proximity Tags	6
Setting and Changing the System Time and Date	7
Telephone Control Commands	7
Receiving a Call	7
Calling the System	8
Regulatory Information	9
FCC Notice	9
Industry Canada (IC) Compliance	9
Limited Warranty	9
Inquiries	9

Summary of Keypad Main User Commands

Away Arm	Code >
Stay Arm	Code >
System Disarm	Code >
Silence an Alarm	Code >
Partition Away Alarm	Code > > Partition No. >
Partition Stay Arm	Code > > Partition No. >
Partition Disarm	Code > > Partition No. >
Duress Unset	Duress Code >
Panic Alarm	Press simultaneously for 2 seconds
Fire Alarm	Press simultaneously for 2 seconds
Medical Alarm	Press simultaneously for 2 seconds
Bypass Zones	Code > [Zone No.]
Activate Output	Code [Activities] [Output Control]
Define Follow Me	> Code [Follow Me] [Define]
View Trouble	Code [View] [Trouble]
View Zone Status	Code [View] [Zone Status]
View Partition Status	Code >
View Event Log	Code [Event Log]
Keypad Chime On/Off	Code [Activities] [Keypad Sound] [Chime]
Edit User Code	Code [Codes/Tags] [Define]
Zone Testing (Walk Test)	Code [Maintenance] [Walk Test]

Introduction

This quick start guide describes the main user operating procedures for the 2GIG Vario system. To view the full *2GIG Vario System User Guide*, visit our website at www.2gig.com.

Keypad Indication

The 2 GIG Vario System LCD keypad is the primary system interface and reports its status via its LCD icons, as described below.

Keypad LCD Icons

 Power	On	System is operating properly from AC power, backup battery is good , and there are no troubles in the system.
	Off	No power.
	Slow Flash	System is being programmed.
	Rapid Flash	System trouble.
 Ready	On	System is ready to be armed.
	Off	System is not ready to be armed.
	Slow Flash	System is ready to be armed while exit/entry zone is open.
 Arm	On	System is armed in Full Arm or Stay Arm mode.
	Off	System is disarmed.
	Slow Flash	System is in Exit Delay.
	Rapid Flash	Alarm condition.
 Stay /Bypass	On	System is in Stay Arm or Zone Bypass mode.
	Off	No bypass zones in the system.
 Tamper	On	Zone/keypad/external module has been tampered.
	Off	All Zones are operating normally.
 Fire	On	Fire alarm.
	Off	Normal operation.
	Flashing	Fire Circuit problem.

LCD Status Display

The LCD status display varies depending on the number of partitions in your system. If your system is defined with only one partition, the LCD displays the partition name, time, and date. If your system has two or three partitions, the LCD displays the system name, date, time, and the status of each partition. Status letters represent partition status, as follows:

A: Partition Armed

N: Partition Not Ready

L: Partition in Alarm

S: Partition Stay Armed

R: Partition Ready

LCD Blank Display

If defined by your installer, two minutes after the last keypad operation, the keypad will be disabled and the following display will appear on the LCD:
Enter code:

To release the keypad and return to normal operation mode, enter a user code and press+ .

NOTE: During blank display mode, the Ready LED indicates a trouble in the system.

Editing User Codes

1. From the main display, press .
2. Enter the master code (default code 1234) and press .
3. Using the arrow keys, scroll to **Codes/Tags** and press .
4. Scroll to **Define** and press .
5. Select the User Index number and press .
6. Select **Edit Code** and press .
7. Enter the new code and press .
8. To edit the user label, scroll to **Edit Label** and enter the new label.
9. Repeat the steps listed above for additional codes.

Assigning Proximity Tags

1. From the main display, press .
2. Enter the master code (default code 1234), and press .
3. Using the arrow keys, scroll to **Codes/Tags** and press .
4. Scroll to **Define** and press .
5. Select the User Index number and press .
6. Select **(Re)Write tag** and press .
7. Within 10 seconds, hold the proximity tag near the keypad.

Setting and Changing the System Time and Date

1. From the main display, press .
2. Enter the master code (default code 1234), and press .
3. Using the arrow keys, scroll to **Clock** and press .
4. When the display shows **Time and Date**, press .
5. Enter the current time (in 24-hour format) and date. To enter the date, use the  and  keys to move the cursor, and the  and  keys to toggle among the choices.
6. Press  to save your settings.

Telephone Control Commands

NOTE: This feature is available only if your 2GIG Vario System is equipped with the 2GIG Vario Voice Module.

Receiving a Call

1. Pick up the phone.
2. Say, "Hello" and press #. You will hear an event announcement message.
3. Choose one of the following options from the Acknowledgment menu:

Acknowledgment Option	Input
Acknowledge message	1
Acknowledge message and stop all dialing	2 > User Code > #
Access the Operations menu	3 > User Code > #
Listen and talk	6 > 3 > User Code
Repeat the event message	#
Repeat the Acknowledgment menu	*

Calling the System

1. Dial the number of the premises.
 - » If the premises has an answering machine, let the line ring once, hang up, and call again.
 - » If the premises does not have an answering machine, wait until the system picks up the call (you will hear a continuous tone).
2. After the tones, enter the two-digit remote access code.
3. Enter your user code and press #.
4. Choose one of the following options from the Operations menu:

Acknowledgment Option	Input
Arm all partitions	1 > 1
Arm by partition	1 > 9 > Partition Number
Disarm all partitions	2 > 2
Disarm by partition	2 > 9 > Partition Number
Change zone bypass	3 > Zone Number > # > 9
Operate utility outputs	4 > Utility Output Number
Change Follow Me numbers	5 > Follow Me Number > # > 2 > New Phone Number > # > 1
Listen in	6 > 1
Talk	6 > 2
Listen and talk	6 > 3
Record messages	7
Exit the system	0
Repeat the Operations menu	#
Return to the previous menu	*

Regulatory Information



FCC Notice

This device complies with Part 15 of the FCC's Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- » Reorient or relocate the receiving antenna.
- » Increase the separation between the equipment and receiver.
- » Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- » Consult the dealer or an experienced radio/TV technician for help.

This product complies with FCC radiation exposure limits for an uncontrolled environment. Avoid operating this product at a distance less than 20 cm from the user.

NOTE: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Industry Canada (IC) Compliance

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Limited Warranty

This Nortek Security & Control product is warranted against defects in material and workmanship of two (2) years. This warranty extends only to wholesale customers who buy direct from Nortek Security & Control LLC or through Nortek Security & Control LLC's normal distribution channels. Nortek Security & Control LLC does not warrant this product to consumers. Consumers should inquire from their selling dealer as to the nature of the dealer's warranty, if any.

There are no obligations or liabilities on the part of Nortek Security & Control LLC for consequential damages arising out of or in connection with use or performance of this product or other indirect damages with respect to loss of property, revenue, or profit, or cost of removal, installation, or reinstallation. All implied warranties for functionality, are valid only until the warranty expires. This Nortek Security & Control LLC Warranty all other warranties expressed or implied.

All products returned for warranty service require a Return Authorization Number (RA#). Contact Returns at 1-855-546-3351 for an RA# and other important details.

Inquiries

Direct all inquiries regarding this regulatory compliance statement to:

Nortek Security & Control
 1950 Camino Vida Roble, Suite 150
 Carlsbad, CA 92008-6517
 USA
 800-421-1587
 5IN2602

THIS PAGE INTENTIONALLY LEFT BLANK