



4-Zone Controller with Switch - Single Pole (One Location)  
Cat. No. VRCZ4-MR, 120/240VAC, 50/60Hz  
Incandescent-1800W – Magnetic Low-Voltage-1800VA (1440W)  
Electronic Low-Voltage-1800W – Fluorescent-1800VA – Supplemental-1/2 HP  
**INSTALLATION INSTRUCTIONS**



**WARNINGS AND CAUTIONS:**

- ON/OFF LED for remote load status.
- To be installed and/or used in accordance with appropriate electrical codes and regulations.
- If you are unsure about any part of these instructions, consult an electrician.
- Recommended minimum wall box depth is 2-1/2".

**WARNINGS AND CAUTIONS:**

- Disconnect power at circuit breaker or fuse when servicing, installing or removing fixture.
- Maximum wire length from dimmer to all installed remotes cannot exceed 300 ft (90 m).
- Use this device only with copper or copper clad wire.

**INTRODUCTION**

Leviton's Vizia RF +™ components are designed to communicate with each other via Radio Frequency (RF) to provide remote control of your lighting. Using RF technology allows Leviton to provide the greatest signal integrity possible. Each module in Leviton's Vizia RF +™ component line is a Z-Wave® enabled device. In a Z-Wave® network, each device is designed to act as a router. These routers will re-transmit the RF signal from one device to another until the intended device is reached. This ensures that the signal is received by its intended device by routing the signal around obstacles and radio dead spots. This 4-Zone Controller is meant to control special zone enabled Z-Wave® products. To control groups of devices that are mixed or do not support zone command class use the Leviton 4-Scene Controller (VRCS4). Setting up this device requires specific advanced controller functionalities, your controller must be able to associate device to groups and must be able to control the zone controller configuration commands such as the advanced Programming Remote (VRCPG).

**FEATURES**


- Switch ON/OFF
- Zone Capable
- This is a Z-Wave® Controller
- Zone control without traveler wires
- Can call 4 zones
- Can control a single load
- ON/OFF LED
- Two way communication
- RF reliability
- Ease of installation – No new wiring
- Compatible with other Z-Wave® enabled devices

**Tools needed to install your device**

- |                              |                 |        |
|------------------------------|-----------------|--------|
| Slotted/Phillips Screwdriver | Electrical Tape | Pliers |
| Pencil                       | Cutters         | Ruler  |

**Changing the color of your device:**

Your 4-Zone controller with switch includes three color options. The controller ships with the White frame attached. To change color of frame, proceed as follows:

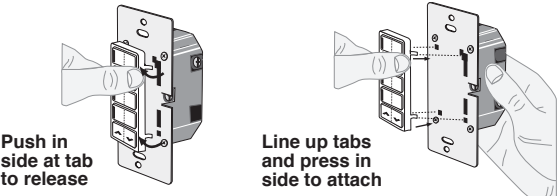


After frame is removed, remove existing push buttons and replace them with desired color change push buttons. To change the DIM/BRIGHT button, before mounting frame, press out DIM/BRIGHT button (bottom) from back of frame and press in from front of frame new DIM/BRIGHT button. To make IR capable, replace with a DIM/BRIGHT button that has the IR window.


**INSTALLING YOUR 4-ZONE CONTROLLER W/ SWITCH**

**NOTE:** Use check boxes ☒ when Steps are completed.


**Step 1** **WARNING: TO AVOID FIRE, SHOCK OR DEATH; TURN OFF POWER** at circuit breaker or fuse and test that power is off before wiring!

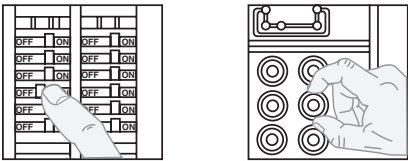

**Step 2** **Identifying your wiring application (most common):**  
**NOTE:** If the wiring in your wall box does not resemble this configuration, consult a qualified electrician.

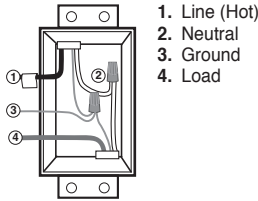

**Step 3** **Preparing and connecting wires:**  
This 4-Zone controller with switch can be wired using side wire terminal screws or through backwire openings. Choose appropriate wire stripping specifications accordingly.

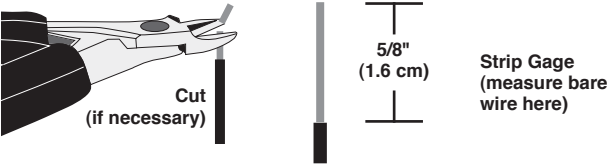

**Step 3 cont'd**




**Side Wire Connection**  
Side wire terminals accept #14-12 AWG solid wire copper only.

**Back Wire (either hole may be used)**  
Back wire openings accept #14-12 AWG solid wire copper only.

- Make sure that the ends of the wires from the wall box are straight (cut if necessary).


**Step 4** **Wiring Application:**

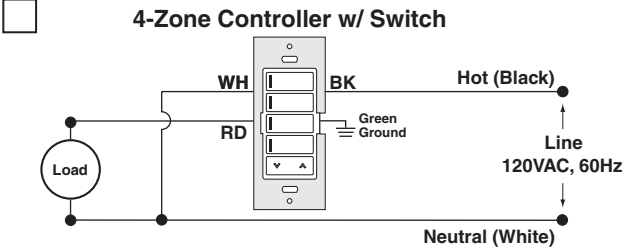

**WIRING DEVICE:**  
**Connect wires per WIRING DIAGRAM as follows:**

- Green or bare copper wire in wall box to Green terminal screw.
- Line Hot wall box wire to terminal screw marked "BK".
- Line Neutral wall box wire to terminal screw marked "WH".
- Load wall box wire to terminal screw marked "RD".

**Step 5** **Testing your device prior to mounting in wall box:**

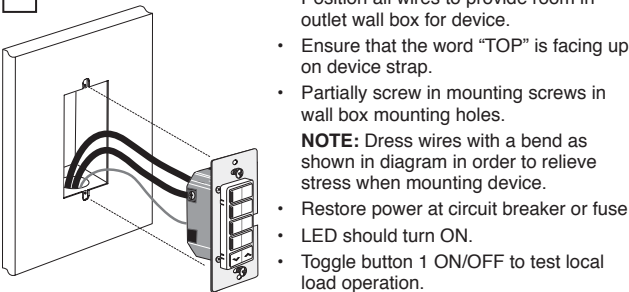

- Position all wires to provide room in outlet wall box for device.
- Ensure that the word "TOP" is facing up on device strap.
- Partially screw in mounting screws in wall box mounting holes.
- NOTE:** Dress wires with a bend as shown in diagram in order to relieve stress when mounting device.
- Restore power at circuit breaker or fuse.
- LED should turn ON.
- Toggle button 1 ON/OFF to test local load operation.

**If LED or LOAD does not turn ON, refer to the TROUBLESHOOTING section.**

**Step 6** **Device Mounting:**  
**TURN OFF POWER AT CIRCUIT BREAKER OR FUSE.**



**Step 7** **Restore Power:**  
Restore power at circuit breaker or fuse.  
**Installation is complete.**

**Step 8** **Including 4-Zone Controller with Switch into Z-Wave® Network:**

- NOTES:**
- If using a non-Leviton Programmer/Remote, refer to the Programmer/Remote instruction sheet.
  - 4-Zone controllers included into a Z-Wave® network must be updated after you have included all other devices.
  - If using the VRCPG Install Checklist feature, go to step C.
  - A)** If using a Leviton Z-Wave® Programmer/Remote, Cat. No. VRCPG, press the Menu button and scroll down to System Setup. Press the center button to select System Setup Menu. Choose Advanced Settings. Press the center button to select Network. Press the center button to <Include Node>.
  - B)** If using VRCPG Programmer/Remote, you will be prompted to place 4-Zone controller into programming mode.
  - C)** To access Program mode, press and hold buttons 1 and 3 (**refer to figure**). Wait 5 seconds until the LED turns Amber. Release the buttons and the LED will blink Amber. You are now in Programming mode. **NOTE:** If the LED on the 4-Zone controller turns solid Red while including, there has been a communication error.
  - D)** While standing close to the 4-Zone controller (approximately 1 ft.), press the center button on the Programmer/Remote to <Include> device in the network. **NOTE:** Only one device may be included at any time.
  - E)** The Primary Programmer/Remote will assign a Home ID and Node ID for this device. **NOTE:** This information will be stored in the Programmer/Remote to be used for future reference. **NOTE:** You may name or edit your device at this time.
  - F)** The 4-Zone controller is now installed in the network. If using VRCPG you will be prompted to include switch, otherwise, please proceed to Step G to include switch.

Step 8 cont'd Including 4-Zone Controller with Switch into Z-Wave® Network:


- G) Including local Switch:
- Remain in Advanced Settings.
  - Press Center button to select <Include Node>.
  - While standing close to the VRCZ4 (approximately 1 ft.) press the center button on the Programmer/Remote to <Include> device in the network.
  - The Primary Programmer/Remote will assign a Home ID and Node ID to your new switch.
  - You may name or edit the device at this time.

NOTE: By default, switch will be controlled by Button 1 on your zone controller.

- H) After all devices are included into the network, the controller must be updated. To update controller proceed as follows:
- If using a non-Leviton Programmer/Remote, refer to the Programmer/Remote instruction sheet for updating controller.
  - If using Leviton Z-Wave® Programmer/Remote, Cat. No. VRCPG, press the Menu button and scroll down to System. Press the center button to select System. Choose Advanced. Press the center button to select Advanced Install. Press the center button to select Update Controller. Select the controller to update. Press center Button to begin update. Update will start automatically. Stand within (1ft) of controller while updating Network topology.
  - Wait until the VRCPG Programmer/Remote confirms completion. Update is done.

NOTE: If the 4-Zone controller with switch has been successfully Included in the network and the user tries to Include it again without first excluding it from the network, the node ID will remain the same.

Cat. No. VRCPG

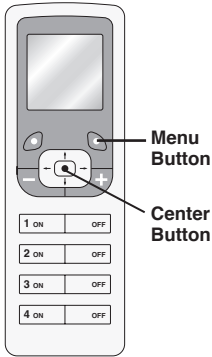

Programmer/Remote Cat. No. VRCPG



NOTE: Programmer/Remote must be in close proximity to 4-Zone controller when including in the network.

Step 9 Excluding 4-Zone Controller with Switch from Z-Wave® Network:

Excluding Load Control:

- A) If using a Leviton Z-Wave® Programmer/Remote, Cat. No. VRCPG, press the Menu button and scroll down to System. Press the center button to select System. Choose Advanced. Press the center button to select Advanced Install. Scroll down to <Exclude Node> and press the center button.
- B) If using VRCPG Programmer/Remote, you will be prompted to place Local Relay Switch into programming mode.
- C) To Exclude, press and hold buttons 2 and 4 (refer to figure). Wait 5 seconds until the LED turns Amber. Release the buttons and the LED will blink Amber. You are now ready to exclude.
- NOTE: If the LED on the Load control turns solid Red while excluding, there has been a communication error.
- D) While standing close to the Load controller (approximately 1 ft.), press the center button on the Programmer/Remote to <Exclude> device from the network.

Excluding 4-Zone controller:


- A) If using a Leviton Z-Wave® Programmer/Remote, Cat. No. VRCPG, press the Menu button and scroll down to System. Press the center button to select System. Choose Advanced. Press the center button to select Advanced install. Scroll down to <Exclude Node> and press the center button.
- B) If using VRCPG Programmer/Remote, you will be prompted to place 4-Zone controller into programming mode.
- C) To access program mode, press and hold buttons 1 and 3 (refer to figure). Wait 5 seconds until the LED turns Amber. Release the buttons and the LED will blink Amber. You are now ready to exclude.
- NOTE: If the LED on the 4-Zone controller turns solid Red while excluding, there has been a communication error.
- D) While standing close to the 4-Zone controller (approximately 1 ft.), press the center button on the Programmer/Remote to <Exclude> device from the network.

Factory Default:

If your 4-Zone controller with switch is not responding, or you are unable to control it after you have tried to Include/Exclude it multiple times, it may be necessary to reset the 4-Zone controller with switch to its original factory settings. To accomplish this, proceed as follows:

- On the 4-Zone controller with switch (refer to figure), press and hold buttons 1 and 3. Wait approximately 10 seconds until the LED turns Amber and then turns solid Red. Allow LED's to blink red twice, release the buttons. The 4-Zone controller with switch is now reset. Once the controller is reset, it will be necessary to Re-Include it to a network before it can be used.

CAUTION: SETTING A DEVICE TO A FACTORY DEFAULT DOES NOT EXCLUDE THAT DEVICE FROM A NETWORK. THE EXCLUSION PROCEDURE MUST STILL BE FOLLOWED TO REMOVE THE DEVICE FROM THE PRIMARY CONTROLLER'S INFORMATION TABLE. FAILURE TO DO SO MAY RESULT IN SYSTEM THAT IS SLOW TO RESPOND, OR MAY FAIL TO RESPOND TO SOME DEVICES.

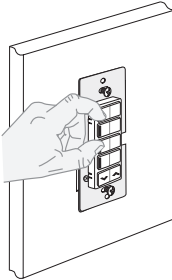

Step 10 Device Association:

After inclusion process, you must associate Vizia RF light switches, to button on the controllers. Refer to the Primary Programmer/Remote instruction sheet for complete details.

NOTE: This step requires a controller that can create association lists to specific groups 1-4.

NOTE: One (1) Z-Wave® light switch can be associated to multiple controllers (up to five (5) controllers maximum).

NOTE: If using a non-Leviton Programmer/Remote, refer to the Programmer/Remote instruction sheet for associating a Vizia RF+ light switch.

NOTE: Your Local switch will be associated by default to button 1.

Step 11



Zone Programming:

- NOTE: All devices associated to the buttons must support Z-Wave® zone command. If a device in the group does not support the zone command it will not be controlled.
- Press and hold desired zone button on 4-Zone Controller until LED blinks Green.
  - Adjust any loads associated to that button by turning ON/OFF or Dim/Brighten the load .
  - Press button again on 4-Zone Controller and the LED will stop blinking.
  - The zone has now been set.

OPERATION

Zone Application:

Push Button (Default settings)


Turn ON from OFF position:  
Press – Zone is activated, Zone LED turns ON.  
LED will blink until Zone is reached.

Turn OFF from ON position:  
Press – Turns all lights in Zone OFF, Zone LED turns OFF.

DIM/BRIGHT:  
Press left side of Dim/Bright button – Lights in last activated Zone will dim.  
Press right side of Dim/Bright button – Lights in last activated Zone will brighten.

NOTE: Controller will only Dim/Bright devices located within direct radio frequency range.

NOTE: LED will be lit only when all lights in zone have reached their preset level. If there is a manual change to any light in the zone, the LED will turn OFF indicating that you are no longer in that zone.

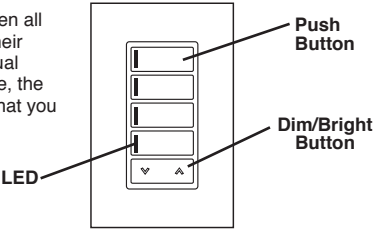

For additional information, contact Leviton's Techline at 1-800-824-3005 or visit Leviton's website at [www.ViziaRFplus.com](http://www.ViziaRFplus.com)

Protected under U.S. Patent Number 6,388,399 and patents pending and licensed under U.S. Patents Numbers 5,905,442, and 5,982,103

TROUBLESHOOTING

Load Device/Switch:

- **Lights Flickering**
  - Lamp has a bad connection.
  - Wires not secured firmly under terminal screws of switch.
- **Light does not turn ON**
  - Circuit breaker or fuse has tripped.
  - Lamp is burned out.
  - Lamp Neutral connection is not wired.

Controller/Zone:

- **Locator LED on controller does not turn ON**
  - Circuit breaker or fuse has tripped.
  - If 4-Zone controller is powered up and LED does not turn ON, check wiring.
- **Zone Controller does not operate lights**
  - Check association.
  - Ensure that controller was properly updated.
  - Re-program your zone, and ensure each light is in the correct ON/OFF state.
- **LED turns solid Red**
  - Check association.
  - Ensure that each device in the network is within 70 ft. (21m) of another device.

FCC COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving Antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/tv technician for help.

FCC CAUTION

Any changes or modifications not expressly approved by Leviton Manufacturing Co., Inc., could void the user's authority to operate the equipment.

LIMITED 5 YEAR WARRANTY AND EXCLUSIONS

Leviton warrants to the original consumer purchaser and not for the benefit of anyone else that this product at the time of its sale by Leviton is free of defects in materials and workmanship under normal and proper use for five years from the purchase date. Leviton's only obligation is to correct such defects by repair or replacement, at its option, if within such five year period the product is returned prepaid, with proof of purchase date, and a description of the problem to **Leviton Manufacturing Co., Inc., Att: Quality Assurance Department, 201 North Service Road, Melville, New York 11747**. This warranty excludes and there is disclaimed liability for labor for removal of this product or reinstallation. This warranty is void if this product is installed improperly or in an improper environment, overloaded, misused, opened, abused, or altered in any manner, or is not used under normal operating conditions or not in accordance with any labels or instructions. **There are no other or implied warranties of any kind, including merchantability and fitness for a particular purpose**, but if any implied warranty is required by the applicable jurisdiction, the duration of any such implied warranty, including merchantability and fitness for a particular purpose, is limited to five years. **Leviton is not liable for incidental, indirect, special, or consequential damages, including without limitation, damage to, or loss of use of, any equipment, lost sales or profits or delay or failure to perform this warranty obligation.** The remedies provided herein are the exclusive remedies under this warranty, whether based on contract, tort or otherwise.