 


battery powered
motion-activated
OUTDOOR NIGHT-LIGHT™

ASSEMBLY AND INSTRUCTION GUIDE

Model #: 40341, 40342

Page 1

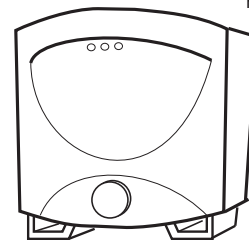

 
ABOUT YOUR OUTDOOR NIGHT-LIGHT™

- Light where you need it most! Your Outdoor Night-Light™ will guide you every step of the way.
- Perfect for both indoor and outdoor use. Place your Outdoor Night-Light™ outdoors by the entrance door, and you won't fumble for your keys or the lock anymore. Place it indoors and you no longer have to enter your house in the dark.
- Use it outdoors for steps, doors, walkways, porches, gates, sheds, decks and more.
- Use it indoors for hallways, bathrooms, steps, and any other dark spaces you can imagine,
- The three brilliant LEDs will light your way, preventing you from falling down the stairs or tripping over objects. Great for lighting up dark areas.
- Totally portable and needs no wiring. Uses 3 AA batteries (not included), which will last 6-12 months depending on usage.

CHOOSING A LOCATION

The selected location should not be near light sources, such as street or porch lighting, as these may cause the Outdoor Night-Light™ to turn off automatically. The Outdoor Night-Light™ should also be installed away from heaters, air conditioners, barbecues, vents, and large reflective surfaces such as swimming pools and jacuzzis, and white walls. To avoid damage to some components, do not aim the motion sensor towards the sun.

At night, the LED lights will remain on for about 50-60 seconds after the last detected movement. If a movement is detected while the lights are on, the light duration will be reset and remain on for about another 50-60 seconds.

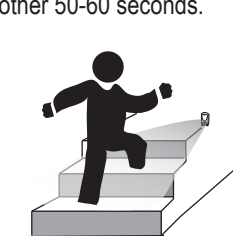

BATTERY INSTALLATION

1. To access the battery compartment, slide the tab on the bottom of the mounting plate to "Open" and slide down the mounting plate on the back side of your Outdoor Night-Light™.
2. Then push up the tab of the battery cover inside and replace the batteries according to the orientation noted in Diagram 2.

Diagram 1


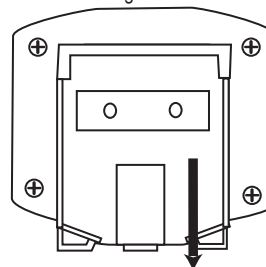 


Diagram 2

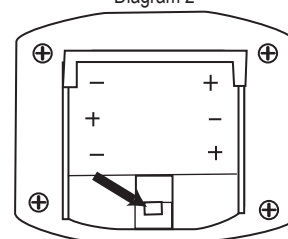 


Your Outdoor Night-Light™ uses three AA batteries. The batteries typically last 6 months to 1 year under normal use.

Note: If your Outdoor Night-Light™ does not turn on after battery installation: Make sure fresh batteries have been inserted matching the correct +/- polarity orientation and are making secure contact with the terminals.

MOUNTING YOUR OUTDOOR NIGHT-LIGHT™

 1. Take out the mounting plate by sliding it down as shown in Battery Installation.
2. Put the flat side against the wall and use the two screws supplied to install the mounting plate. If you are installing it on a very hard surface, you may need to first drill holes for the screws. The included screw anchors can be used for drywall, cement, brick, or similar surfaces.
3. Slide down the main body of your Outdoor Night-Light™ onto the mounting plate after the plate is attached to the wall.

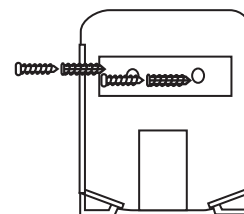

OPERATING YOUR OUTDOOR NIGHT-LIGHT™

1. Install the batteries (see BATTERY INSTALLATION section).
2. Choose a location (see CHOOSING A LOCATION section).
3. Mount the light (see MOUNTING YOUR OUTDOOR NIGHT-LIGHT section), or simply stand the unit on any flat surface.
4. Built-in motion sensor automatically turns on the light when movement is detected in the area. The light remains on as long as motion continues to be detected. **Please note that there is no On/Off switch, the light can only be activated by motion.**
5. Built-in photosensor allows the light to only be turned on at night or in darkness, conserving energy.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Light does not turn on when there is movement in the detection area.	1. Batteries are old. 2. Nearby lighting is too bright. 3. The sensor is facing the wrong direction.	1. Replace the batteries with fresh batteries. 2. Redirect the sensor or install in a different location, away from other lighting. 3. Aim the sensor toward the desired detection area.
Light turns on for no apparent reason (false trigger).	1. Heat sources such as air conditioners, vents, barbecues, other outside lighting, or moving cars are triggering the motion sensor. 2. Pets or other animals are triggering the motion sensor. 3. Reflections from swimming pools, jacuzzis, white walls, or other large reflective surfaces are triggering the motion sensor.	1. Install the Outdoor Night-Light™ away from the sources of interference. 2. Redirect the sensor. 3. Install the Outdoor Night-Light™ away from the sources of reflections.

SPECIFICATIONS

Batteries Required: 3 AA cell alkaline

Wattage: Maximum 0.72 W, static ≤ 0.24 mW

Voltage: 4.5 V DC

Light Duration: approx. 55 seconds from last motion detected

Weatherproof Rating: IP44

90 DAY LIMITED WARRANTY

This Motion-Activated Light is warranted against faulty material and/or workmanship for a period of 90 days from date of original purchase. The obligation of the manufacturer, under this warranty, is limited to servicing and replacing defective parts when the unit is returned to MAXSA Innovations, freight pre-paid during the warranty period. To obtain warranty repair, the purchase receipt should be returned with the product.

This warranty becomes void on any unit which has been tampered with, damaged by accident, or damaged otherwise by improper operation.

This guarantee is in addition to any guarantees implied by State or Federal Legislation.



MAXSA Innovations
8412 Cathedral Forest Drive
Fairfax Station, VA 22039
Tel: 703-495-0661
www.maxsainnovations.com
info@maxsainnovations.com

MADE IN CHINA

v10.5

©2010 MAXSA Innovations, LLC