

Fig. 8

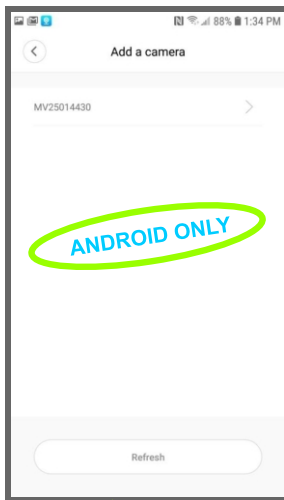


Fig. 9

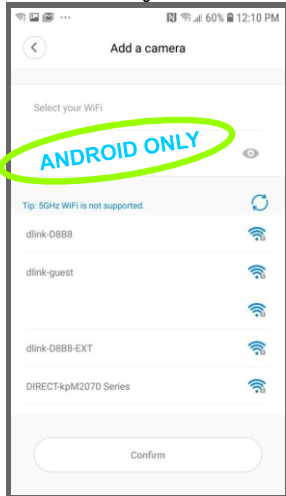


Fig. 10

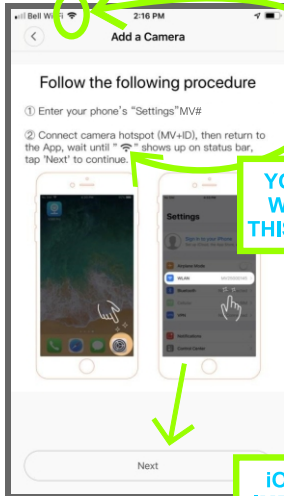


Fig. 11

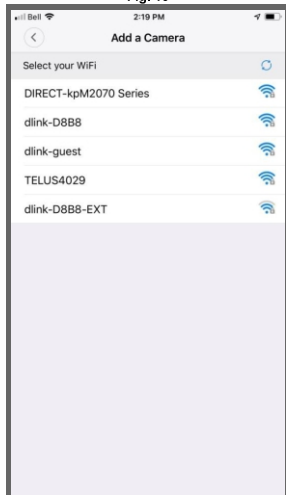


Fig. 12

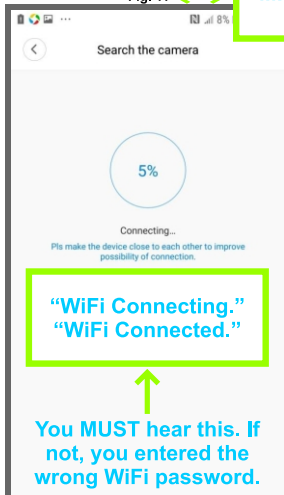


Fig. 13

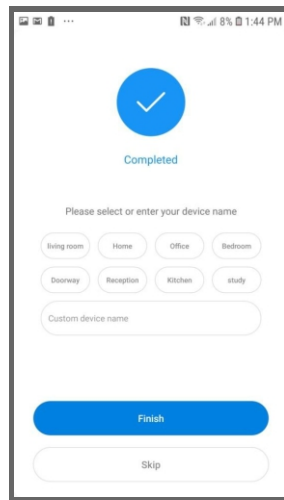


Fig. 13A

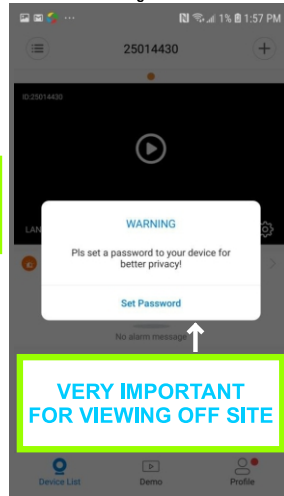


Fig. 15

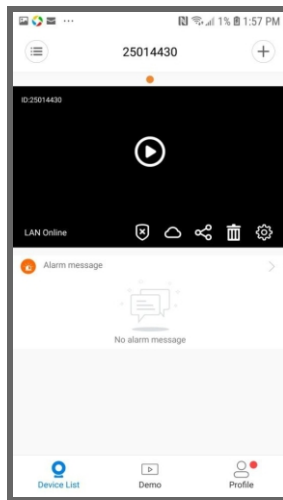


Fig. 14

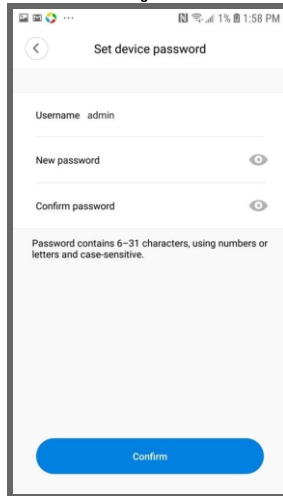


Fig. 16

Restore to Factory Default Settings

Make sure that power is connected.

Press Reset button of the camera for more than 5 seconds. You will hear "Restore factory's default setting" → "Access Point establishing" → "Access Point established".

Sales Representative

Name: _____
Phone: _____
Email: _____



maxocam V380 PRO Quick Installation Guide



get the free app at maxogram.com/app

Due to app and hardware firmware updates, this installation guide may cease to be accurate. Visit our website for the latest version of this document or scan the image above using the free Maxogram app for an always up-to-date video guide to installation.

*You won't believe
what you're missing!*

maxocam.com
@getmaxocam

Installing the App and Creating Account

1. Install the V380 Pro app from the Google Play Store or the Apple App Store.
2. Start the app and you will see introductory pictures. Tap "Try Now" on the last picture. Fig. 1 will be shown.
3. Tap Register and tap Region selection (Fig. 2). Select North America (Fig. 3) and go back to Fig. 2.
4. Enter your email address (this will be your account ID) and tap "Verify Code" (Fig. 2 and Fig. 4).
5. A code is sent to your email address. Check your email, get and enter the 6 digit code (You may only have 60 seconds to do this. If needed, tap "Verify Code" again.) Tap "Next" (Fig. 4). Enter password (Fig. 4A) (numbers & letters) and tap Submit.
6. Fig. 5 will be shown. Tap "Login" and then Fig. 1 will be shown again. Enter your registered email address and password and tap "Login".

Now account registration is complete.

WiFi Signal Strength

WiFi signal strength can diminish when passing through barriers such as walls, ceilings, furniture, etc. When you install outdoor or indoor cameras that require WiFi to pass through these barriers, signal strength may diminish due to this as well as the distance between the router and camera.

Upload & download speed of more than 2Mbps is recommended for stable operation. You can test the speed just next to your camera using a free speed test app available on the Google Play Store or Apple App Store.

If the speed is not fast enough for smooth communication between your router and camera, you may need to install a WiFi range extender. Ask your sales representative.

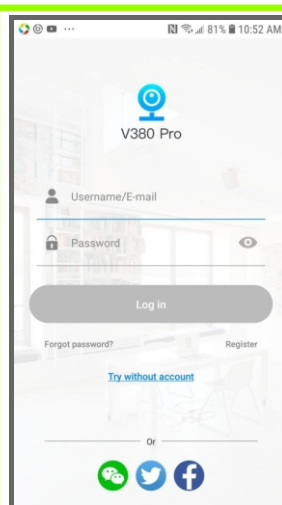


Fig. 1

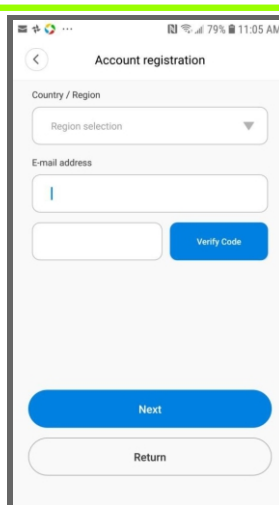


Fig. 2

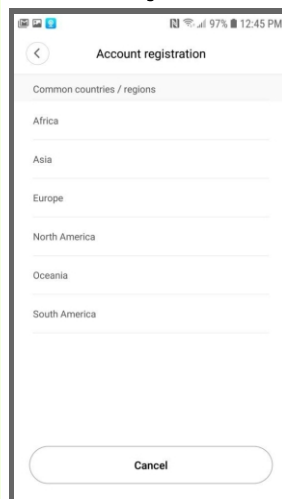


Fig. 3

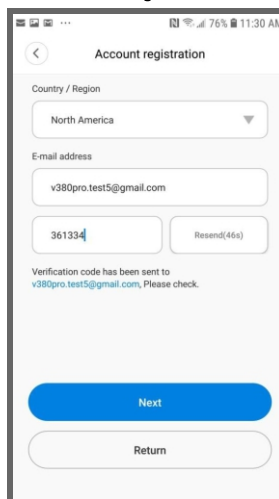


Fig. 4

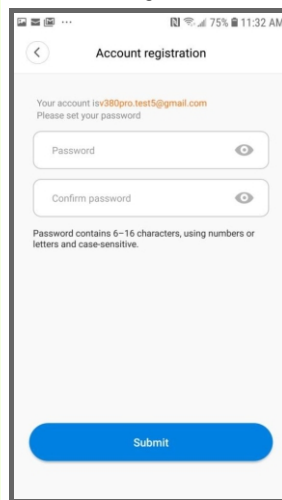


Fig. 4A

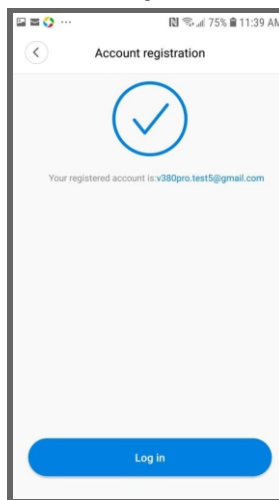


Fig. 5

Connecting the Camera to Your WiFi

1. **iOS** Tap Add Camera (Fig. 6) & connect the camera to power (Fig. 7. For iOS Add Camera and tap "Next".
2. Wait until you hear "Access-Point established" then tap the arrow to continue (Fig. 8).

Android: Fig. 9 will be shown (if MVxxxxxxx is not shown tap Refresh). Tap the Access-Point number (MVxxxxxxx). If error shown in Fig. 17 is seen, select on Settings of phone.

Fig. 10 will be shown. Select a 2.4GHz WiFi router & enter password of the router & tap "Confirm" (this could be hidden under keyboard).

iOS: Fig. 11 will be shown. Go to Settings of your iPhone. Tap WiFi and connect MVxxxxxxx and return to the app. Wait for the status bar (top left corner) to display  icon (it takes around 40 seconds). Then tap "Next".

Fig. 12 will be shown. Select a 2.4GHz WiFi router and enter password of the router and tap "Start" (a small pop-up screen will be shown).

3. Fig. 13 and then 13A will be shown. You may select or enter device name or just skip. Wait until you hear "WiFi connected" and Fig. 14 is shown.

4. Tap Play (Fig. 14) & tap "Set password" (Fig. 15). Enter password (numbers+letters) & tap "Confirm" (Fig. 16).

The camera is ready to use. See our website for a detailed explanation of all functions.

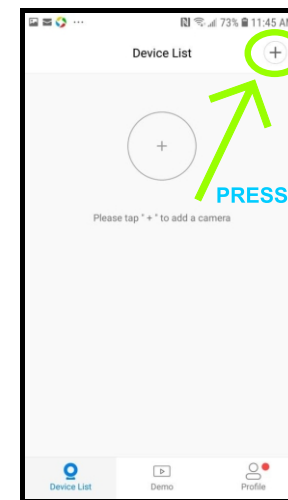


Fig. 6

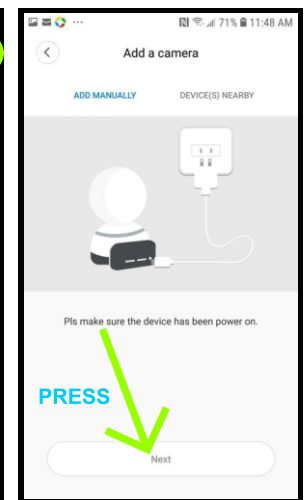


Fig. 7