

NAPCO StarLink SL^e-GSM Activation


Thank you for your purchase of an advanced NAPCO StarLink SL^e-GSM Communicator. Before installation, the SL^e-GSM must be activated and a service plan must be purchased.

- If your company has NOT yet been registered as a NAPCO StarLink Dealer, please go to www.NapcoComNet.com, to register your company and create a Dealer account (Dealer accounts are approved Monday through Friday, 8:30 AM to 4:30PM. Please allow 1 business day for approval.)
- If your company has already been registered as a NAPCO StarLink Dealer, please go to www.NapcoComNet.com, and log in to activate the radio and select a service plan.

After the radio has been activated and a service plan selected, it is ready to be installed.

If the installation requires basic alarm communication (the transmission of any control panel alarm report to central station), there is **no** further configuration required. The radio will *auto-matically* capture and transmit all alarm events to the intended central station receiver.

For **Primary Reporting**, simply connect the radio to the control panel Telco **tip** and **ring** terminals and provide power to the radio as per the installation instructions (see WI1936 for backup reporting wiring configuration).

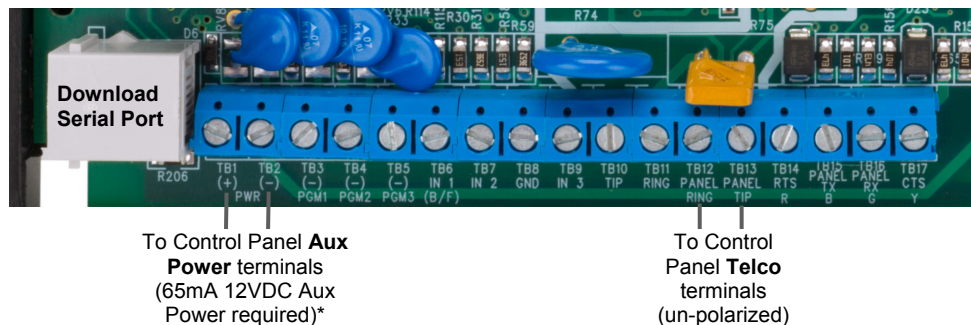

*Refer to WI1936 for details

If GSM downloading to a NAPCO Gemini series control panel is required, purchase part "SLE-DLCBL" Download Cable (6ft.) to connect the SL^e-GSM download serial port to the control panel serial port.

For advanced programming, go to www.NapcoNOC.com. Advanced programming includes double reporting, backup reporting, redirection of report to new central station, configuring of radio inputs and outputs, etc. You may log into your NapcoNOC account using the same credentials you created to log into your NapcoComNet account above.



333 Bayview Avenue, Amityville, New York 11701 USA
For Sales and Repairs, (800) 645-9445 For Technical Service, (800) 645-9440
Publicly traded on NASDAQ Symbol: NSSC