



Installing the Ring Power Elite Kit

Step One: Install Ring Video Doorbell Elite in your wall, before performing set up in the Ring app.

Step Two: Using the provided adapter, plug your Elite Power Kit into any wall outlet near your ethernet source.

Step Three: Plug the three foot ethernet cable into the port that says, "Internet In." This cable will run from either your router or ethernet switch.

Step Four: Plug the 50-foot cable into the port that says, "To Ring Elite."

Step Five: Run this cable to Ring Doorbell Elite, going through your walls, if necessary.