

Warranty

Multiplex Technology, Inc. warrants this product to be free from defects in materials and workmanship for a period of one year from the date of purchase or MTI will repair, or at its option, replace the defective product. To obtain warranty service, call MTI for a return material authorization (RMA) number and return the product prepaid to Multiplex Technology, Inc., 3001 Enterprise Street, Brea, CA 92821, Attention: Customer Service. Please put the RMA number on the outside of the carton.

Any implied warranty arising from the sale of the product including implied warranties of merchantability and fitness for purpose are limited to the warranty stated above. MTI shall not be responsible for losses or damages or expenses, whether direct, consequential or incidental arising from the use of or the inability to use this product. Some states do not allow limitations on how long the implied warranty lasts or the exclusion or limitation or incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights which may vary from state to state.

SAFETY INFORMATION:

- A) Never install telephone wiring during a lightning storm.
- B) Never install telephone jacks in a wet location.
- C) Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- D) Use caution when installing or modifying telephone lines.

IMPORTANT INSTRUCTIONS:


When you use your telephone equipment, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- 1. Read and understand instructions.
- 2. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
- 3. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltages.
- 4. Use on UL listed cabinets like the H218A or H236A.

SAVE THESE INSTRUCTIONS



Data Distribution Module

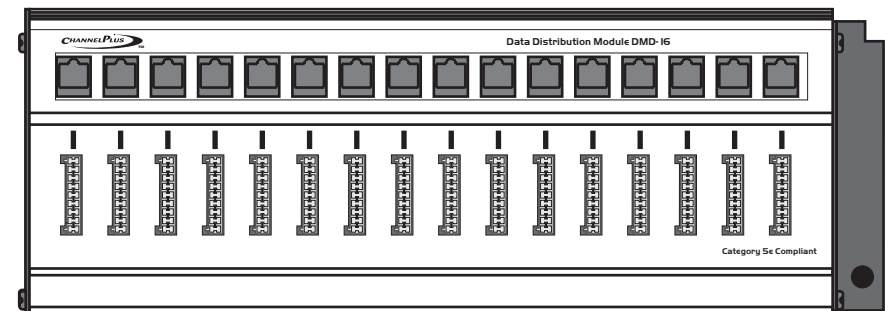

Model DMD-16


Designed for
ChannelPlus and OpenHouse
structured wire grid systems.




Installation in structured wire enclosure typical DSL modem

Category 5e Compliant

Included: (2) Flat Surface Mounting Ears. (1) Disconnect Jumper
(66) Labels

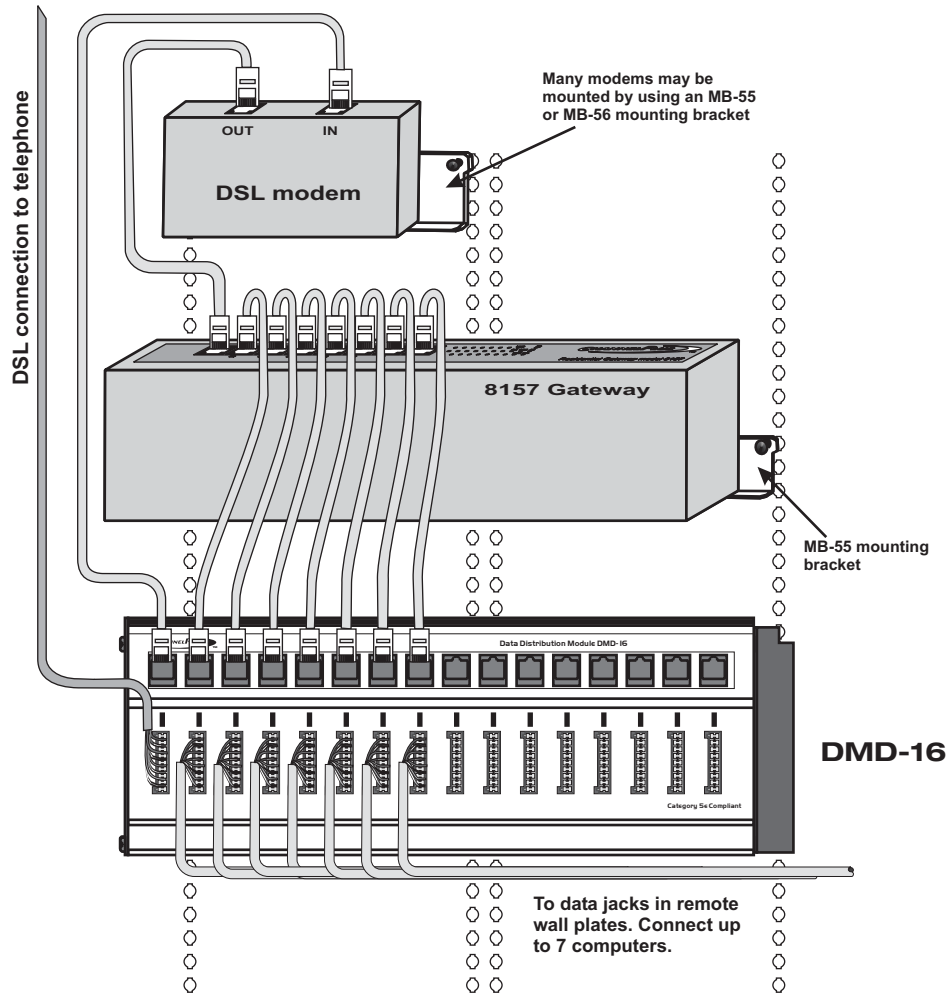


8 position modular connector

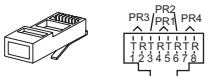


RJ-45 (wired to TIA T568A standard)
Ethernet (both 10BaseT and 100BaseT)

Wiring a 110 connector (a)


Keep sheath close to connector
Untwist .5" max.

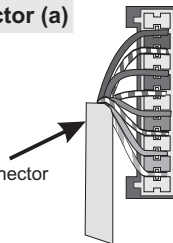

Installation in structured wire enclosure typical Cable modem

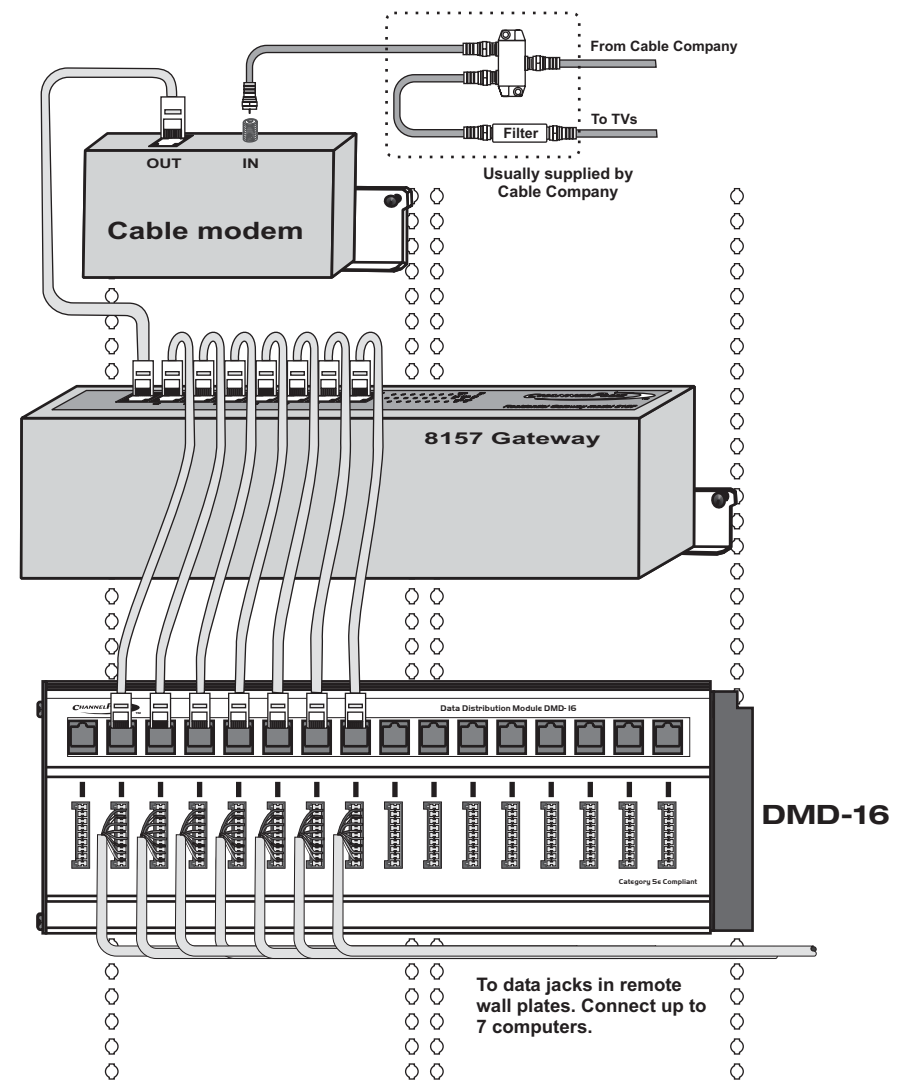

Wiring a 110 connector (b)

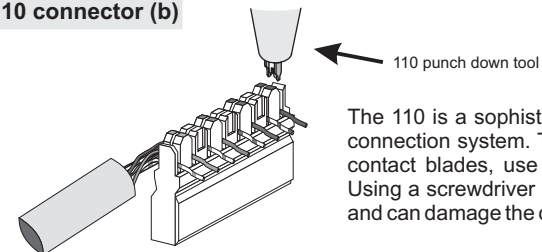

The 110 is a sophisticated insulation displacement connection system. To push the wires between the contact blades, use only a 110 punch down tool. Using a screwdriver may not seat the wire properly and can damage the contacts.