




Installation Manual

NV-BK6C and NV-BK8C Rough-in Brackets

The NuVo Rough-in Brackets provide an accurate cutout template for the NuVo AccentPlus speakers prior to drywall installation. Each bracket is quickly and easily assembled and installed between ceiling joists and wall studs.

Step 1: Remove the bracket and wings from the shipping box. Attach the wings to the center bracket piece, Fig. 1.

Fig. 1

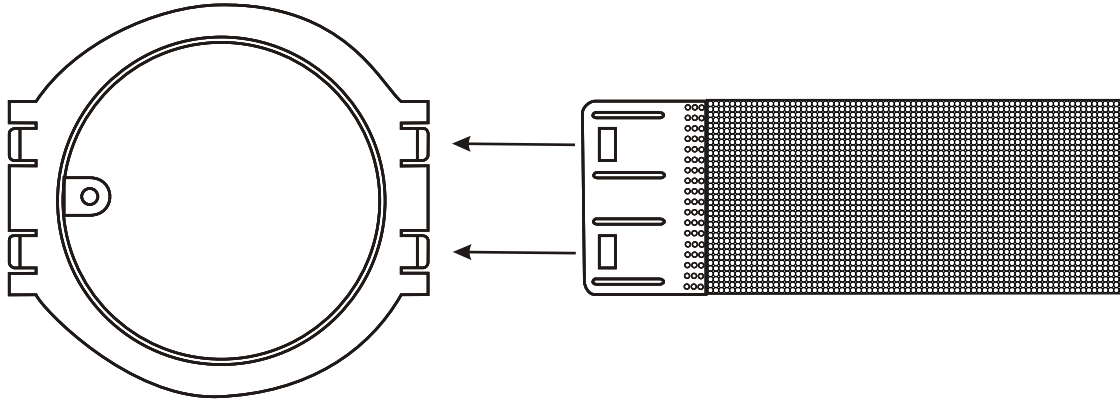

Step 2: Decide on the optimal placement of each speaker within the room. It is best to leave sufficient distance between the speakers for the best possible stereo separation. Keep in mind as well the best listening area for the room. The NV-AP16C and the NV-AP18C speakers are designed to be placed in the ceiling, so placement centered over the room's living space is crucial to the listener's audio experience.

Step 3: Locate the bracket assembly between the ceiling joists or wall studs and attach it using staples, nails, or wood screws. Orient the inner lip extending from the center of the bracket toward the living space and away from the ceiling joists, Fig. 2.

Fig. 2



Step 4: Once the bracket is installed, we recommend that you utilize the wire tie to hold the speaker wire in place until the speaker installation is completed, Fig. 3. The AccentPlus Speakers have built-in dog-ears that hold the speaker in place, so no other brackets or assembly hardware is necessary.

Fig. 3

