


Connecting the NetMedia TriplePlay™ Modulator

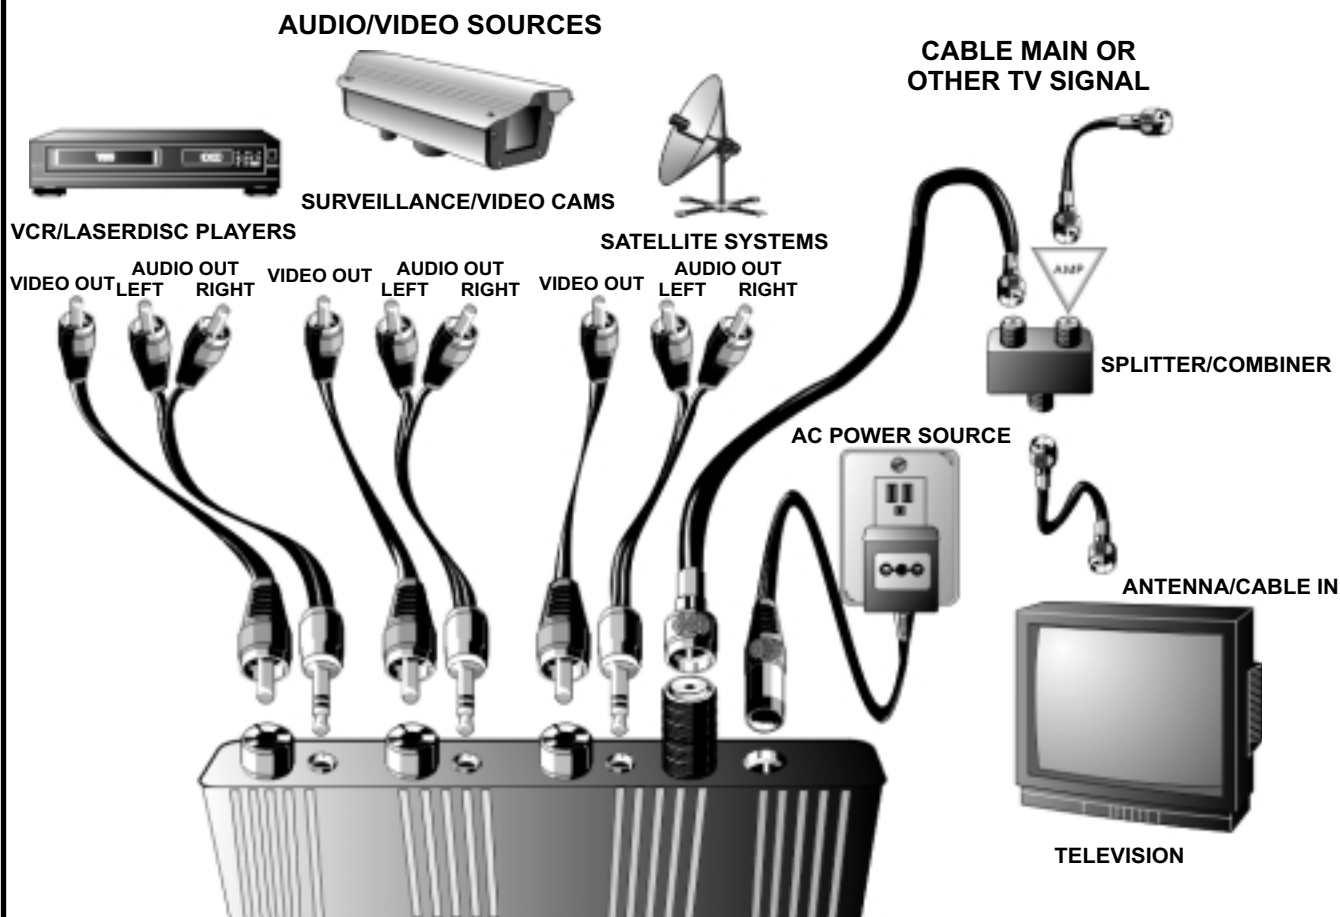

REAR VIEW OF TRIPLEPLAY

FIGURE 1
CONNECTING THE TRIPLEPLAY

How To Connect The TriplePlay Modulator

See Figure 1.

- 1.) Insert the male RCA connector from the video source into one of the TriplePlay RCA connectors.
- 2.) Insert the 3.5mm stereo jack from the audio source into one of the TriplePlay stereo audio inputs.
- 3.) Use a male "F" connector cable to output the TriplePlay modulated signal to a splitter/combiner.
- 4.) Plug the provided 12V DC, 300mA power supply into the powerline and the TriplePlay.

NetMedia, Inc.
10940 N. Stallard Place, Tucson, Arizona 85737
(520) 544-4567 Fax: (520) 544-0800
Email: info@netmedia.com
www.netmedia.com



Copyright © 2000 - 2003 NetMedia Inc. All Rights Reserved

Programming the NetMedia TriplePlay™ Modulator

SETTING CHANNELS (UHF 14-69, CABLE 70-94 & 100-125)

Please read instructions completely before you begin. If you do not enter the programming promptly, the programming sequence will time-out and terminate. Each time you program or reprogram a channel, you are starting again from zero.

Decide what channels you wish to use. If combining with an antenna system, choose UHF channels 14-69. If combining with cable, choose CABLE channels 70-94, 100-125. Choose channels that are not currently in use by any local broadcast, cable, or other modulated source (many cable companies use channels 80-116 for their digital services). There must also be at least one blank channel separating each modulated channel from these other sources. Please note where applicable, that you must bypass cable boxes to view modulator output.


All three channels can be set at once. Tap the Select Button until all three LEDs are on and follow the programming procedures. The first modulator will be set to the channel selected, the second will be 2 channels higher, the third will be 4 channels higher (examples: setting 14 = 14, 16, 18; setting 70 = 70, 72, 74; setting 94 = 94, 101, 103).

Each channel can be set individually by following the programming steps while only one LED is on.

Test Pattern: A test pattern (two white vertical bars) will display after programming or when select button is tapped.

Disable any unused modulators. Set to channel 00 by entering programming mode and allowing it to time out without selecting any channel.

TRIPLE-CHANNEL SETUP

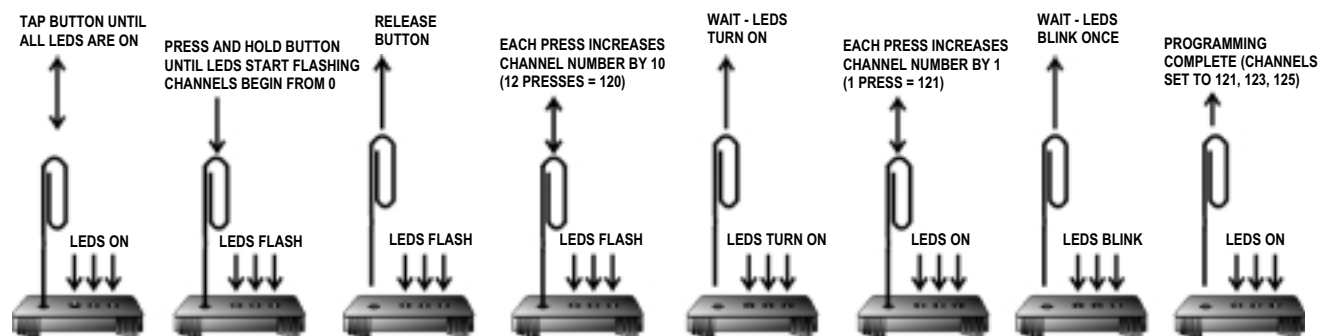

MODULATING DSS/SATELLITE OVER YOUR CABLE SYSTEM

