



333 Bayview Avenue
Amityville, New York 11701
For Sales and Repairs, (800) 645-9445
For Technical Service, (800) 645-9440
Publicly traded on NASDAQ Symbol: NSSC

© NAPCO 2012


NAPCO iSeeVideo ISV WLHDCAM Installation Guide

WI1973 010/12

iSeeVideo™



Indoor 720P HD Wireless IP Camera

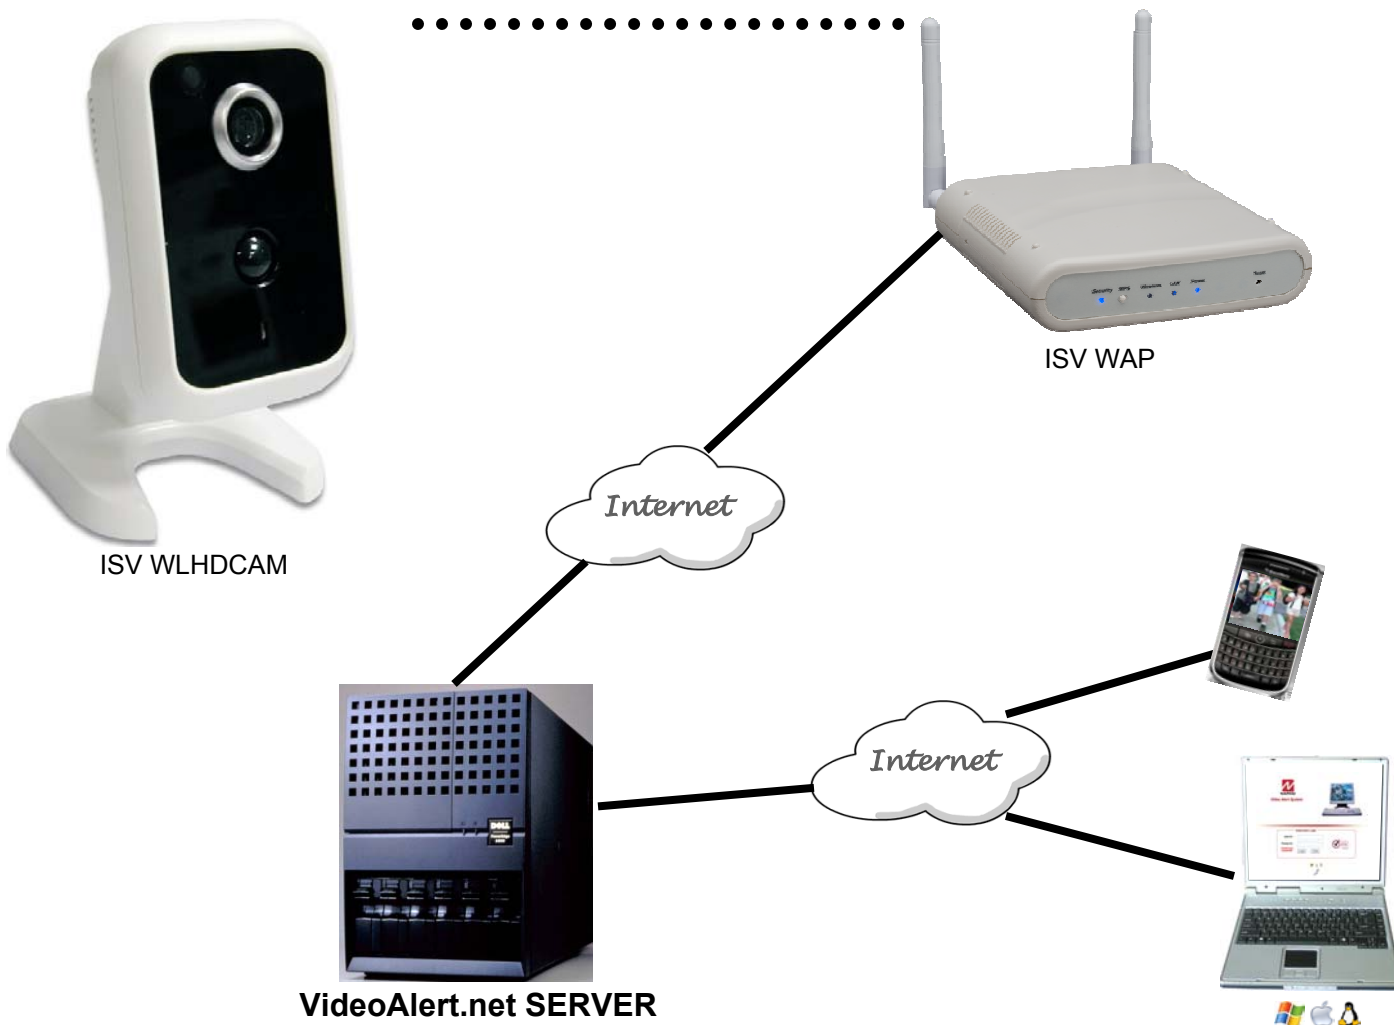

Designed exclusively for use with NAPCO iSeeVideo VideoAlert.net Server




COMPATIBLE

ISV WLHDCAM Specifications:

- Resolution: 720P HD (1280 x 720) at up to 30 Frames-per-second
- CMOS, 1/4" HD Resolution Image Sensor
- Lens: Fixed Focus Lens, Aperture: F2.0, Diagonal View Angle: 66° (Horizontal=57.8°, Vertical=37.8°)
- Image Control AWB, AGC, Sharpness, Brightness
- (4) Programmable Pixel Based Analytic Motion Detection Zones
- Compression: H.264, MPEG-4
- Wireless Protocol: 802.11n
- Wireless Encryption: 128 Bit WPA
- Connectors: Ethernet RJ-45, DC Power, Reset
- Power Adapter: 12VDC/1A, 100/240 VAC Input
- Dimensions (HxWxD) 90 x 62 x 35 mm (3.6" x 2.4" x 1.4")
- Weight 115g (0.25lb.) w/o stand, 150g (0.33lb.) w/stand
- Certification CE/FCC
- Operating Temperature: 0° to 45°C (32° to 113°F)
- IR Night vision LEDs: 8, 1 Light Sensor
- IR Night vision Range: 40' (12m)
- PIR Motion Sensor Range: 25' (7.6m) with a viewing angle of 85° when installed at a height of 8' (2.4m)
- Dual Technology Motion Detection Option, PIR and Pixel based trips required for event triggering. (Pats Pending)
- PIR Motion Detection Pattern:

TOP VIEW

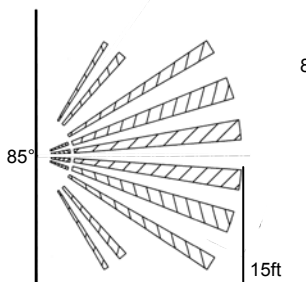

SIDE VIEW

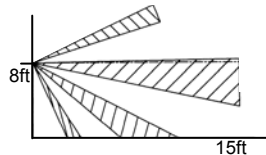


Table of Contents

Features and specifications	2
System Overview	3
Configuring the wireless connection	4
Securing the wireless connection	4
Account Activation.....	6
Adding Cameras to an Existing Account.....	8
Configuring Motion Detection.....	10
Advanced Settings	11
Setting a Motion Schedule	11
Viewing Stored Video.....	11
NAPCO Limited Warranty	12



ISVWLKIT1 Fixed IP WL Camera Kit
 (1)ISVWLCAM, fixed IP wireless camera, mounting bracket, Suction Cup Window Bracket, Power Adapter with 15' cable
 (1)ISVWAP, WL Access Point, CAT5 cable, Power Adapter.
 12 months iSeeVideo network service



ISVWLPTKIT2 Additional Fixed IP WL Camera
 (1)ISVWLCAM, fixed IP wireless camera, mounting bracket, Suction Cup Window Bracket, Power Adapter with 15' cable
 12 months iSeeVideo network service



ISVWLPTKIT2 Pan/Tilt IP Camera Kit
 (1)ISVWLCAMPT, pan/tilt IP wireless camera, mounting bracket, Power Adapter with 15' cable
 (1)ISVWAP, WL Access Point, CAT5 cable, Power Adapter.
 12 months iSeeVideo network service



ISVWLPTKIT2 Additional Pan/Tilt IP Camera
 (1)ISVWLCAMPT, mounting bracket, 15' CAT5 cable, Power Adapter with 15' cable
 12 months iSeeVideo network service

ISVWLOKIT3 One Outdoor IR IP Camera Kit
 (1)ISVWLOCAM, Outdoor IR wireless IP camera, mounting bracket, Power Adapter with 15' cable
 (1)ISVWAP, WL Access Point, CAT5 cable, Power Adapter.
 12 months iSeeVideo network service

ISVWLOCAM Additional Outdoor IR IP Camera
 (1)ISVWLOCAM, Outdoor IR wireless IP camera, mounting bracket, Power Adapter with 15' cable
 12 months iSeeVideo network service

ISVWLHDKIT3 One HD Indoor HD IR IP Camera Kit
 (1)ISVWLHDCAM, Indoor HD wireless IP camera, mounting bracket, Power Adapter with 15' cable
 (1)ISVWAP, WL Access Point, CAT5 cable, Power Adapter.
 12 months iSeeVideo network service

ISVWLHDCAM Additional Indoor HD IR IP Camera
 (1)ISVWLHDCAM, Indoor HD wireless IP camera, mounting bracket, Power Adapter with 15' cable
 12 months iSeeVideo network service

Mobile Application Support:

[iPhone, iPod and iPad](#)
[Android™ OS 1.6 or newer](#)
[BlackBerry™](#)

Pearl*
 Curve*
 Curve World Edition*
 Bold
 Tour
 Storm
 Storm 2
 Torch

*OS ver. 4.6 or newer required



NAPCO Security Systems, Inc.
 For Sales and Repair, call toll free: (800) 645-9445

For direct line to Technical Service,
 call toll free: (800) 645-9440
 Internet: <http://www.napcosecurity.com>

Windows®, and the Windows logo are registered trademarks of Microsoft Corporation
 Apple® and the Apple logo are registered trademarks of Apple Computer, Inc.
 Linux® is a trademark of Linus Torvalds. The Linux penguin logo was created by [Larry Ewing](#).

Overview of the iSeeVideo System

The **NAPCO iSeeVideo** system allows remote video internet monitoring of homes and businesses through a unique subscription based account system that provides the opportunity to realize recurring revenue from residential and commercial video installations. The system is comprised of the following components:

The **ISV WLHDCAM** high quality 720P HD wireless indoor IP video camera provides video at 1280 x 720 pixels that can be viewed through the iSeeVideo server on virtually any computer in the world at 20 frames per second (typical). The **ISV WLHDCAM** also provides a PIR motion sensor that when activated will prompt the transmission of video clips to the iSeeVideo server. It also features IR LED illumination for night vision applications. The **ISV WLHDCAM** provides (at no additional service charge) dynamic IP support through the iSeeVideo DNS network - keeping constant track of the broadband modem's IP address changes, ensuring that the DHCP IP address is always kept current.


The **ISV WAP Wireless Access Point** allows the simple instant configuration of the wireless iSeeVideo camera, without confusing or intrusive multi-step enrollment procedures (patents pending).

The installation procedure for the WAP and cameras is actually not a procedure at all; simply plug the WAP into the customer's network (router) and power up the cameras. At this point, all of the cameras are fully operational and can be viewed through the iSeeVideo portal, protected by the default iSeeVideo 128bit encryption. Once all cameras are up and running, simply click the LOCK icon on the portal to prompt the camera to send a new, unique, random 128bit encrypted secure key to the WAP, ensuring the best possible wireless security.


This is unlike competitive installation procedures, which involve confusing multiple steps with specific precision timing, or in some cases force the installer to use the customer's personal computer to "discover" the cameras and download "plug-ins" through the computer in order to enroll a required gateway.

The iSeeVideo system was designed to avoid all of these obvious complications and privacy concerns. The customer's personal property should never be used as an installation tool, especially when the computer contains the customer's personal data including communications, pictures and banking.

The **NAPCO iSeeVideo server** maintains video accounts and allows subscribers to view their iSeeVideo cameras from any personal computer, web enabled cell phone or mobile device. It is compatible with computers running the Microsoft Windows®, Apple® and Linux® operating systems and is also compatible with any web enabled cell phone or mobile video device. The server also automatically notifies the subscriber by email upon receipt of triggered video events and archives them for viewing at a later time. Each subscriber account provides 50Mb of storage, allowing the archiving of about (50-60) 10 second video clips (adjustable 5 sec pre-alarm and 5 sec post-alarm). The server is designed to allow the customer to have complete control of their account in regard to passwords, email addresses and other personal information.

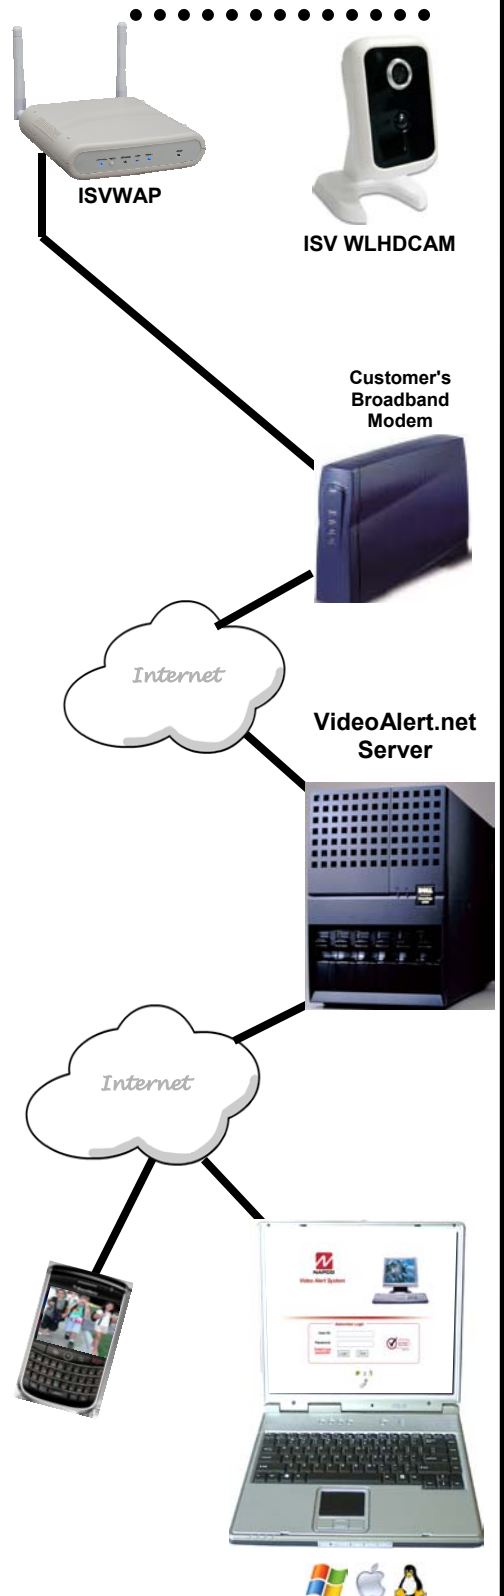

Controls and Indicators

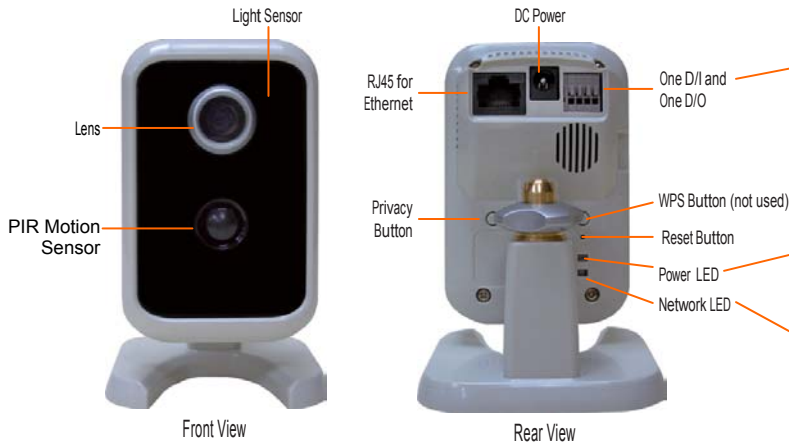

Input/output Terminals




DI is a N/O input (activates upon short of DI to GND)

DO is an open collector output that must be connected to a low current relay or directly to an EOLR terminal on an alarm panel zone input.

LED INDICATION TABLE

POWER LED	STEADY	Camera has power
	BLINKING	Camera initializing, trying to obtain an IP address
	OFF	No power
NETWORK LED	STEADY	Network connection good, not transmitting or receiving
	BLINKING	Camera transmitting or receiving data
	OFF	No network connection

1 CONFIGURE THE NETWORK CONNECTION

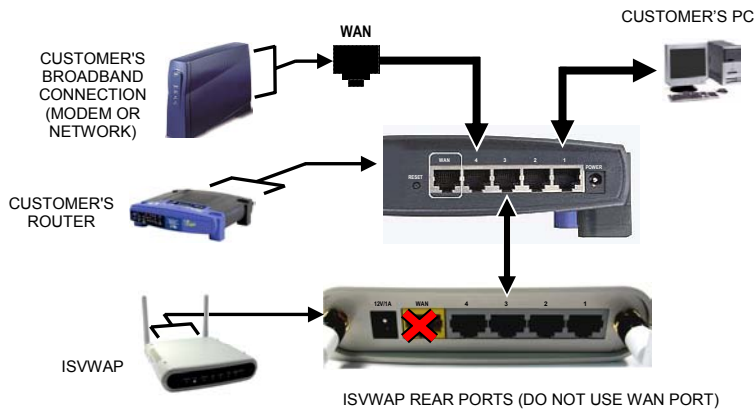

- ⇒ Make the connections above and plug in the ISVWAP power adaptor
- ⇒ Attach the antennas to the camera(s)
- ⇒ Plug in the camera power adaptor

There are no other steps required to deploy the cameras through the customer's network; the cameras will automatically begin communicating to the iSeeVideo server system.


Create the new iSeeVideo account and register the cameras as shown on page 5.

Secure the iSeeVideo Wireless network

Once all cameras have been registered to the new account and can be viewed, the wireless network must be secured.

- ⇒ While viewing each camera, simply click **Secure Now!** next to the unlock icon and the camera will send a new, unique 128bit encrypted secure key to the Wireless Access Point, providing a secure wireless connection.
- ⇒ You will be automatically logged out of the account; log back in to view the secured camera to ensure that the unlock icon has change to a locked state.
- ⇒ Repeat for each camera in the system.

If a new camera is added to the system in the future, simply repeat the above procedure to secure it.

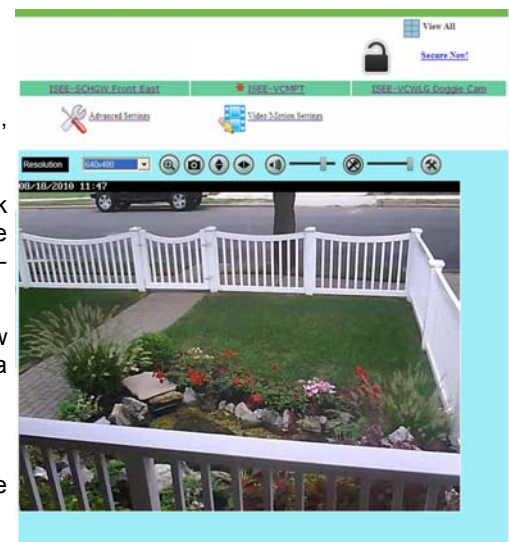

2 Activating the iSeeVideo account

Following are the steps for account activation. These activation steps include the branding of the camera to your Company's personalized iSeeVideo web page, registration of the camera and adding Users to the account.

NEW ACTIVATION

1. To activate your new **iSeeVideo** account, simply enter the following Internet address in your Web browser:

<https://www.videoalert.net/>

...and the following webpage appears:

Click the **NEW ACTIVATION** button

The New Activation screen will appear. Enter the 8 or 12 character Camera ID Code exactly as printed on the label on the back of the camera.

SC _ _ _ _ _
OR
000E8F _ _ _ _ _

Click **Next** →

2. The Dealer Branding screen will appear. Enter your Company Dealer Admin ID and Password and click **Next** →

When Dealer Branding is successful, a screen offering the following options will appear:

[Create Subscriber Account Now](#)

Click to create a new Subscriber account with this camera and enter the Subscriber details (see below)

[ADD or REPLACE a VIP Device](#)

To add or replace a camera to the account click here. See Adding additional cameras to an existing account for more details.



[Brand Another VIP Device](#)

If there are multiple cameras to be installed, click here to brand these devices

[Go to Login Page](#)

Click here to go directly into your camera log-in screen.

For a single camera system, click [CREATE Subscriber Account](#)

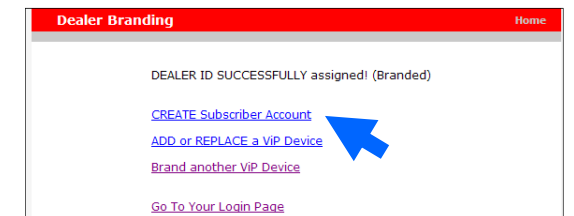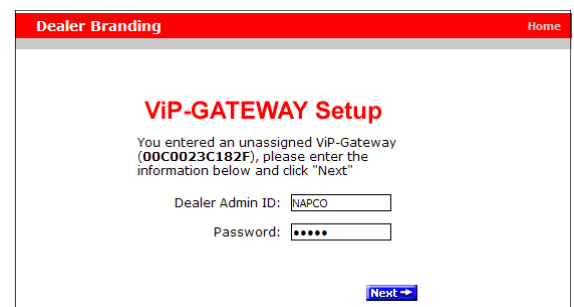

3. Create Subscriber Account Now

Click to bring up the Subscriber Details screen, where the basic account information is entered.

Enter your name, address, telephone number and other information in the appropriate fields as shown in the image at right.

The User ID and Password entered at this step will become the Master User of the account and will be the only User to have administrative privileges (the ability to program Advanced Settings and add Users to the account)

NOTE: All field descriptions marked with an asterisk (*) must be completed.

! IMPORTANT - Change your Password

Click **Next** →

New Activation (2/3) Home

Subscriber Details

Assigned Subscriber Number: NAPC123684 VIP-Gateway MAC Number: 00C0023C182F

* Required Fields

Enter VIP-Gateway Description or Friendly Name:

*First Name: *Last Name:

Address: City:

State: Zip Code:

Country:

*Telephone: *Email:

Mobile: Facsimile:

Security Credentials

Enter below the desired User Identification and Password to access your services.

*User ID:

*Password:

*Password Verification:

Autodetect the "Best Video Viewer" for your PC and Internet Connection ☒

Next →

4. Confirmation

The **"Confirmation"** section verifies all information entered above.

Be sure to check the accuracy of the information displayed, and if changes are required, click the **Prev** button to edit any previously entered information.

When you are sure the information displayed is correct, click the **Update** button to complete your new account activation procedure.



If you forget your password, click the **"Forgot Your Password?"** link on the **Subscriber Login** screen and an email with your password will be sent to the email address above

Confirmation

Assigned Subscriber Number: NAPC427075 VIP-Gateway MAC Number: 0009B5100000

Dear Your Last Name Your First Name,

Please confirm the information below and press "Update" to complete your VIP-Gateway Activation!

* Feel free to go back (Prev) to make any changes

User ID: test4

Email: eiei@napcosecurity.com

Address:

Telephone: 631-555-1234

Prev Update

5. Login Screen

The iSeeVideo login screen will appear. Test the account by logging in with the new User ID and Password.

iSeeVideo NAPCO

Subscriber Login

User ID:

Password:

Forgot your password? **Login** **Clear**

VIP-GATEWAY / VIP CAM NEW ACTIVATION

Frequently Asked Questions ?

6. My Cameras Screen

If login is successful, the My Cameras screen will appear. This is the User's "Home" screen, and will allow them to manage their account, view cameras and stored video.

iSeeVideo NAPCO

My Cameras

Click on the Image for Live View

My Videos

My Account

My Alerts

My VCR

Logout

View All

188E-SCH00V-Front-East

188E-SCH00V-Front-West

18V-WOCAM-Back-East

18V-WOCAM-Back-East

7. My Account

Click **My Account** to view account information. From this screen, you can update your account information (My Information), and add Users to the account.

To add a new User to the account, click [Add a New User](#).

ID (* Master)	Full Name	Authorized View Live	Autodetect Viewer
tom *	Tom Karl	Yes	Yes

[Add a New User](#)

MY INFORMATION (Account # NAPC493130)

First Name: Tom Last Name: Karl
Address: 153 Bayview Avenue City: Amityville
State: NY Zip Code: 11757
Country: USA
Telephone: 800-645-9945 Email: karl@napcosecurity.com
Mobile: Facsimile:
[Update](#)

MY REGISTERED CAMERAS

ID	Description	Date Activated	Active
00C0023C182F	Karl	6/5/2008	Yes
00C002286484		6/7/2008	Yes
00C00228AB09	Rear Camera	6/8/2008	Yes

8. Adding additional Users. To add User to the account, click [Add a New User](#) and the **User Details** screen opens, allowing you to add new users in the fields shown. **Note:** All fields are required.

Enable (check) **Authorize Live Video Review** if to allow the user to view live video sat any time.

By default, **Auto-detect "Best Video Viewer..."** should always be enabled.

Click **Update** to add the new user and return to the previous screen, or click **Prev** to cancel and return to the previous screen.

The system supports a maximum of 5 Users, including the Primary User.

Full Name:
Email:
Authorize Live Video View ☒
Autodetect "Best Video Viewer" for your PC and Internet Connection ☒
Security Credentials
Last Time this user logged in: 3/16/2008 4:55:47 PM
User ID: SC28AB06
Password:
Password Verification:
* All Fields Are Required [Update](#) [Prev](#)

9. Click **Email Alert Settings** to enter the Email address of those Users you wish to be notified via email when a triggered motion detection event occurs. The email message will include a link to the account and will allow them to review stored video. The system supports a maximum of 5 Users, including the Primary User.

You may also enter the subject you would like the User to see on the subject line of the email, as well as text in the message body.

To activate the video motion detection feature, see page 10.

My Alerts

* Primary Recipient:
CC1. Email Recipient:
CC2. Email Recipient:
CC3. Email Recipient:
CC4. Email Recipient:
* Tip: Leave "Primary Recipient" blank to disable ALL email alert reception
Customize Email Content
Subject:
Message Body:

Adding or Replacing cameras on an existing account.

Once the camera has been registered and the account has been created, additional cameras, if any may be added to the account through the following steps:

1. Return to the www.videoalert.net login screen and click the **NEW ACTIVATION** button



The New Activation screen will appear. Enter the 8 or 12 character Camera ID Code exactly as printed on the label on the back of the camera.

SC _ _ _ _ _
OR
000E8F _ _ _ _ _

Click **Next** →

2. The Dealer Branding screen will appear. Enter your Company Dealer Admin ID and Password and click **Next** →

3. After Dealer Branding is complete, click Add or Replace a VIP Device.

4. The next screen that appear will allow the registration of the camera to the correct account. A pull-down menu will appear, listing all accounts assigned to the Dealer ID entered in the branding screen.

Select the correct account from the list by clicking it and then click **Next** → to continue.



New Activation on an Existing Subscriber (2/3) [Home](#)

Add or Replace ViP-Gateway / ViP-Cam

Select the Subscriber Account from the list below and Click "Next":

NAPC493130: Tom Karl - 333 Bayview Avenue Amityville, NY

[← Prev](#) [Next →](#)

5. The following screen allows the entry of the camera description in the Enter New Device Description field.

Click the pull-down menu and select Add Device to complete the addition of the new camera to the account.

NOTE: If replacing a ViP Device assigned to the account, select from the pull-down menu the device you wish to replace.

Click **Next** → to continue.



New Activation on an Existing Subscriber (3/3) [Home](#)

Add or Replace ViP-Gateway / ViP-Cam

New Device: 00C0022BAB09

Enter New Device Description:
(optional)

Account: NAPC493130

To Add a new ViP Device Select "Add Device".

If Replacing a ViP Device, select the one you are replacing.

Add Device

[← Prev](#) [Next →](#)

6. When the activation is complete, the log in screen will appear, with the message "ViP Activation completed successfully!"



ViP-Gateway Activation completed successfully!

Subscriber Login

User ID:

Password:

[Forgot your password?](#) [Login](#) [Clear](#)







3 CONFIGURING THE ISV WLHDCAM

Once the ISV WLHDCAM(s) have been and powered up, and the account has been activated, the cameras may be configured. The next several pages will guide you through the on-line configuration process.

Note: If the cameras are only to be used for live viewing and there are no plans to trigger video motion events to the server, configuration is not required.

MOTION DETECTION (OPTIONAL)

The ISV WLHDCAM supports both PIR and pixel-based motion detection which allows the camera to send motion triggered video clips to the VideoAlert.net video server upon motion in a selected area.



Video Motion Settings

To configure the camera for motion detection, enter Video Motion Settings mode by clicking the Video Motion icon and the Video Motion Settings screen will appear.

- The enable pixel-based motion detection, click the ACTIVE box. To set a motion detection window, click the colored box on the right and drag the window into the live image.
- To enable the PIR Motion Sensor, click the "Enable Integral PIR Motion Sensor" box.
- To combine the pixel base and PIR based motion detection technology, enable the Integral PIR Motion Sensor and also enable the "AND" With Pixel Based Motion Detection.

To set the pixel based motion detection boxes, simply drag the window to a specific section of the live view screen and size it appropriately by pressing SHIFT and dragging a side of the window. Once the window is properly positioned and sized, the sensitivity threshold can be set by dragging the corresponding threshold slider to the left for more sensitivity and to the right for less. Use the slider control for each respective Area box to adjust the sensitivity of the pixel based motion detection, with 0% being the highest sensitivity and 100% being the lowest.

For both PIR and pixel based motion triggering, the camera has the ability to store video recorded before the actual sensing of motion. Use the PRE and POST slider control to adjust the Pre-Capture Length and Post-Capture Length setting, with Pre-Capture Length being the length of video captured *before* the actual sensing of motion and the Post-Capture Length being the length of the video *after* the sensing of motion.

When settings are complete, click the Apply/Save and then click the camera name above the live view to exit.

Programming Motion Detection Schedules

If desired, the Motion Detection feature may be controlled by schedule, allowing the user to set a specific time and day for motion detection and email triggering. This will prompt the system to capture video clips and send email notifications only if motion detection is sensed during the scheduled time period.

To program schedules, go to the live viewer and click the Advanced Settings icon and the advanced features screen will appear. Turn to page 11

ADVANCED SETTINGS



To enter Advanced Settings, click the tool icon

Firmware Version

The firmware version of the camera will display. If there is a new version available, a message will display, along with a button to upgrade to the new version.

Camera Time Zone

Use to set the time zone of the camera.

Enable Time Stamp

Enable to place a time and date stamp on the live and saved video.

Enable Text Display

Enable and enter the camera name you would like to see on the screen.

Flip Video

Enable to invert video in cases where camera is installed upside down.

Power Frequency

Use to adjust frequency in cases where fluorescent lighting is causing flicker.

LED Mode

Use to disable camera LED indications (Power and Network LEDs)

Event Schedule

To enable a time schedule for motion detection triggering, select the desired day(s) in the Effective Time Frame window. Click Start Time and End Time to select the start and end time of the motion detection schedule. As schedules are programmed, they will appear in the Event Schedule window.

Audio

- Enable **Microphone** to activate the microphone on the front of the camera
- Enable **Speaker** to activate the speaker line output on the back of the camera.

HW Trigger Input

- Select **Video Clip** to trigger transmission of video clip to server upon closure of trigger input D/I.
- Select **Arm/Disarm** to activate arming of motion detection feature upon closure of trigger input D/I.

Viewing of Stored Video

To view stored video clips, click on the [My Videos](#) link and the My Videos page will appear.

For each video, a three frame thumbnail image will appear, along with a time and date stamp indicating the time and date of the creation of the file.

The file can be deleted by clicking [Delete](#) adjacent to the file.

The file can also be saved on the hard drive of the computer being used to view the file by clicking the download icon adjacent to the file.

Once the number of video clips stored in the account reaches the maximum allotted size for the account, each new file stored will result in the automatic deletion of the oldest file.

Advanced Settings



ISEE-SCHGW Front East ISEE-SCHGW Front West ISV WLCAM Doggie Cam
ISV WOCAM REAR EAST ISV WOCAM REAR WEST * zISEE-HDWLN

Device Model ISEE-HDWLN

Firmware Version: V1.0.07

Restart Device

Time Zone (GMT-05:00) Eastern Time (US & Canada)

(The time/date is automatically adjusted via an NTP Server)

Options

☒ Enable Time Stamp

☐ Enable Text Display

☐ Flip Video

☐ Mirror Image

Power Frequency

☐ 50 Hz ☒ 60 Hz. (Adjustment for fluorescent lighting)

Led Mode

☒ ON ☐ OFF (Camera LED indicators)

Event Schedule

Delete

New Schedule

Effective Time Frame: Every Day

Start Time: 00 : 00 (hh:mm)

End Time: 00 : 00 (hh:mm)

Add

Clear

Audio

☐ Enable Microphone

☐ Enable Speaker

HW Trigger Input

☒ Video Clip (Normally Closed) ☐ ARM/DISARM

Day/Night Mode

☒ Auto ☐ Day Only ☐ Night Only

Save

Close

Help

Day/Night Mode

Controls the Infrared night vision feature of the camera

- Select **Auto** to automatically switch to night vision mode upon darkness
- **Day Only** deactivates the night vision feature
- **Night Only** will permanently activate the night vision feature

My Videos

My Cameras

Logout

*Click on Video Thumbnail or Date/Time to Review.
To save your clip on your PC, click the Download icon.

Storage Used: 100% (150 Mb)

			5/31/2012 3:12:14 PM	
			5/29/2012 10:26:42 AM	
			5/25/2012 7:53:52 AM	
			5/24/2012 3:38:32 PM	
			5/17/2012 1:31:24 PM	
			5/16/2012 7:15:26 AM	

NAPCO LIMITED WARRANTY

NAPCO SECURITY SYSTEMS, INC. (NAPCO) warrants its products to be free from manufacturing defects in materials and workmanship for *twelve months* following the date of manufacture. NAPCO will, within said period, at its option, repair or replace any product failing to operate correctly without charge to the original purchaser or user.

This warranty shall not apply to any equipment, or any part thereof, which has been repaired by others, improperly installed, improperly used, abused, altered, damaged, subjected to acts of God, or on which any serial numbers have been altered, defaced or removed. Seller will not be responsible for any dismantling or reinstallation charges.

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. THERE IS NO EXPRESS OR IMPLIED WARRANTY OF MERCHANTABILITY OR A WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. ADDITIONALLY, THIS WARRANTY IS IN LIEU OF ALL OTHER OBLIGATIONS OR LIABILITIES ON THE PART OF NAPCO.

Any action for breach of warranty, including but not limited to any implied warranty of merchantability, must be brought within the six months following the end of the warranty period.

IN NO CASE SHALL NAPCO BE LIABLE TO ANYONE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, EVEN IF THE LOSS OR DAMAGE IS CAUSED BY THE SELLER'S OWN NEGLIGENCE OR FAULT.

In case of defect, contact the security professional who installed and maintains your security system. In order to exercise the warranty, the product must be returned by the security professional, shipping costs prepaid and insured to NAPCO. After repair or replacement, NAPCO assumes the cost of returning products under warranty. NAPCO shall have no obligation under this warranty, or otherwise, if the product has been repaired by others, improperly installed, improperly used, abused, altered, damaged, subjected to accident, nuisance, flood, fire or acts of God, or on which any serial numbers have been altered, defaced or removed. NAPCO will not be responsible for any dismantling, reassembly or reinstallation charges.

This warranty contains the entire warranty. It is the sole warranty and any prior agreements or representations, whether oral or written, are either merged herein or are expressly cancelled. NAPCO neither assumes, nor

authorizes any other person purporting to act on its behalf to modify, to change, or to assume for it, any other warranty or liability concerning its products.

In no event shall NAPCO be liable for an amount in excess of NAPCO's original selling price of the product, for any loss or damage, whether direct, indirect, incidental, consequential, or otherwise arising out of any failure of the product. Seller's warranty, as hereinabove set forth, shall not be enlarged, diminished or affected by and no obligation or liability shall arise or grow out of Seller's rendering of technical advice or service in connection with Buyer's order of the goods furnished hereunder.

NAPCO RECOMMENDS THAT THE ENTIRE SYSTEM BE COMPLETELY TESTED WEEKLY.

Warning: Despite frequent testing, and due to, but not limited to, any or all of the following; criminal tampering, electrical or communications disruption, it is possible for the system to fail to perform as expected. NAPCO does not represent that the product/system may not be compromised or circumvented; or that the product or system will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; nor that the product or system will in all cases provide adequate warning or protection. A properly installed and maintained alarm may only reduce risk of burglary, robbery, fire or otherwise but it is not insurance or a guarantee that these events will not occur. CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE, OR OTHER LOSS BASED ON A CLAIM THE PRODUCT FAILED TO GIVE WARNING. Therefore, the installer should in turn advise the consumer to take any and all precautions for his or her safety including, but not limited to, fleeing the premises and calling police or fire department, in order to mitigate the possibilities of harm and/or damage.

NAPCO is not an insurer of either the property or safety of the user's family or employees, and limits its liability for any loss or damage including incidental or consequential damages to NAPCO's original selling price of the product regardless of the cause of such loss or damage.

Some states do not allow limitations on how long an implied warranty lasts or do not allow the exclusion or limitation of incidental or consequential damages, or differentiate in their treatment of limitations of liability for ordinary or gross negligence, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.